



AAR INTERMODAL JOB CODE PHOTO GLOSSARY

Intermodal Operations Committee

Effective January 1, 2013

Association of American Railroads

Safety and Operations
425 Third Street SW
Washington, DC 20024

Location, Condition and Why Made code details listed for each component illustrate which codes are applicable to a specific Job Code, however, APPENDIX F Complete Matrix must be utilized to determine which combinations of Location, Condition and Why Made codes are valid for each Job Code.

1115 BiasTire

- Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear



BiasTire

- Condition Codes**

1 - ReplaceW/New
 3 -ReplaceW/Remfg/Recap

- Why Made Codes**

7 – LaborOnly
 8 - Missing
 9 - SlickTread
 10 - SeperatedCap
 11 - Blister
 13 - RunFlat
 14 – Cut,Torn
 17 – ChannelCrackorWeathercheck
 20 - CorrectImproperRepair
 34 - SlidFlat



1116 RadialTire

- **Location Codes**



RadialTire



LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

- **Condition Codes**

1 - ReplaceW/New
 3 - ReplaceW/Remfg/Recap

- **Why Made Codes**

7 – LaborOnly
 8 – Missing
 9 - Slick Tread
 10 - Separated Cap
 11 – Blister/Knots
 13 – Run Flat
 14 - Cut/Torn
 17 - WeatherChck/Channel Crack
 20 - Correct Improper Repair
 34 – Slid Flat

1207 Rim-Tubeless



Rim-Tubeless



- **Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

- **Condition Codes**

1 - ReplaceW/New
 2 - ReplaceW/Used

- **Why Made Codes**

2 – Bent
 3 – Broken
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.

1208 Rim-TubeType



Rim-TubeType



- Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

- Condition Codes**

1 - ReplaceW/New
 2 - ReplaceW/Used

- Why Made Codes**

2 – Bent
 3 – Broken
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.

1230 Flap



- **Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF – Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

- **Condition Codes**

1 - ReplaceW/New
 2 - ReplaceW/Used



- **Why Made Codes**

1 – AssociatedWithRepairs
 14 - Cut/Torn
 15 - Worn Out/Det.
 20 - Correct Improper Repair

1254 ValveStem



ValveStem



- **Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs,
 3 – Broken
 6 - Leaking
 8 - Missing

1258 LugNut



LugNut



- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

 
- **Condition Codes**

1 - ReplaceW/New
6 - MaterialOnly
A - Secure

- **Why Made Codes**

1 - AssociatedWRepairs
7 - Loose
8 - Missing
15 - Worn Out/Det.


1260 WheelStudandNut

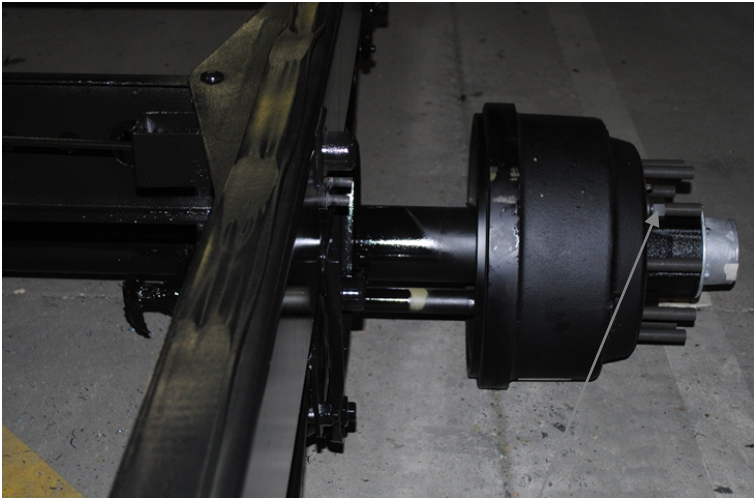

Location Codes

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

 WheelStudandNut

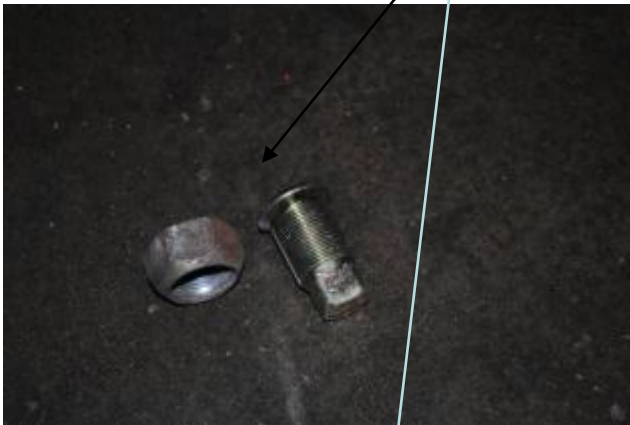

- **Condition Codes**

1 - ReplaceW/New
 6 - MaterialOnly

- **Why Made Codes**

1 – AssociatedWRepairs
 3 – Broken
 8 – Missing
 15 - Worn Out/Det.

1266 SpacerRim

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear



SpacerRim

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 - Missing



1270 LockRing,Rim

- **Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

LockRing,Rim



- **Condition Codes**

1 - ReplaceW/New,
 2 - ReplacedW/Used

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 - Broken

1274 WheelStud



- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

 
1 – AssociatedWithRepairs
3 – Broken
8 - Missing



1278 LugClamp



LugClamp

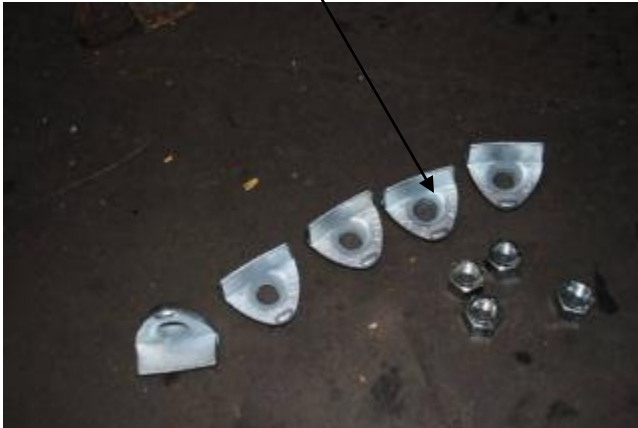

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 - Missing

1509 Tube



Tube



- **Location Codes**

LIF – Left Inside Front
 LIC – Left Inside Center
 LIQ – Left Inside Quad
 LIR – Left Inside Rear
 LOF – Left Outside Front
 LOC – Left Outside Center
 LOQ – Left Outside Quad
 LOR – Left Outside Rear
 RIF - Right Inside Front
 RIC – Right Inside Center
 RIQ – Right Inside Quad
 RIR – Right Inside Rear
 ROF – Right Outside Front
 ROC – Right Outside Center
 ROQ – Right Outside Quad
 ROR – Right Outside Rear

- **Condition Codes**

1 - ReplaceW/New
 B - Patch

- **Why Made Codes**

1 – AssociatedWithRepairs
 13 – Run Flat
 14 - Cut/Torn
 15 - Worn Out/Det.

2001 SlideTandem/Tridem

- **Location Code**

U - Under

- **Condition Code**

7 - Labor Only

- **Why Made Code**

 
21 - Corrosion

Slide Tandem/Tridem Complete*



*NOTE: Triaxle tandem (Tridem) not shown.

2005 EqualizerwithBushing

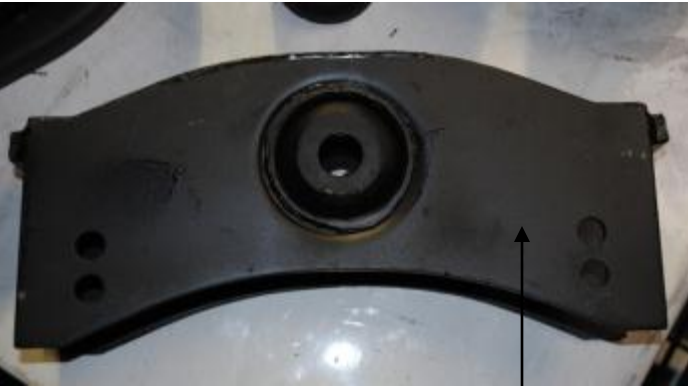

EqualizerwithBushing



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
3 - ReplaceW/Remfg/Recap
A - Secure

- **Why Made Codes**

7 – Loose
15 - Worn Out/Det.
21 - Corrosion

2006 EqualizerBushing



EqualizerBushing



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Code**

1 - ReplaceW/New

 
- **Why Made Code**

15 - Worn Out/Det.

2012 SlidingTandem/TridemLockAssembly



SlidingTandem/Tridem
Lock Assembly

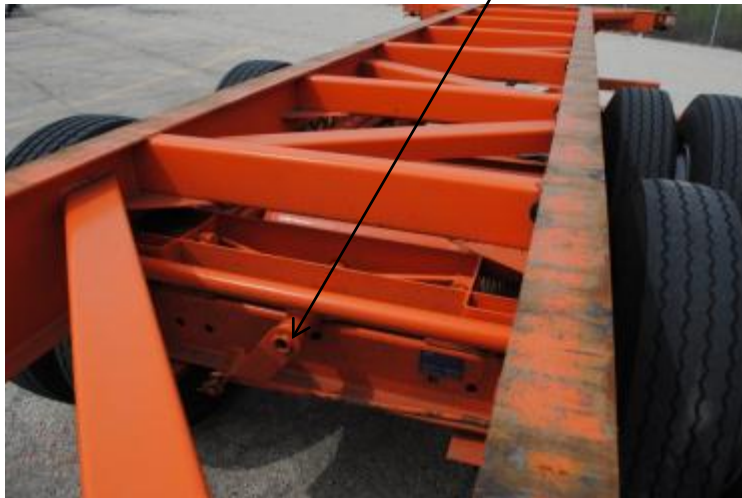

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

15 - Worn Out/Det.

18 - Weld Broken

20 - Correct Improper Repair

2013 SliderHandle

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

21 - Corrosion



SliderHandle



2014 SliderHandleReturnSpring



SliderHandleReturnSpring



- **Location Code**

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 – Missing

15 - Worn Out/Det.

2015 SliderEndPlateStops

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 - Missing



SliderEndPlateStops



2018 Sub-FrameAssembly

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New
 2 - Replacew/Used
 8 - Straighten
 D - Weld

- **Why Made Codes**

2 - Bent
 3 - Broken
 18 - Weld Broken



Sub-Frame Assembly
 Complete without
 Slider Rails



2020 SliderRail

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

2 - Bent

 
3 - Broken

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair


21 - Corrosion

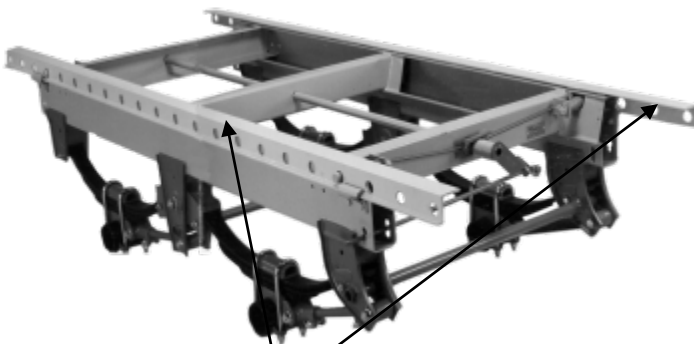

SliderRail



 2021 SliderRailPad

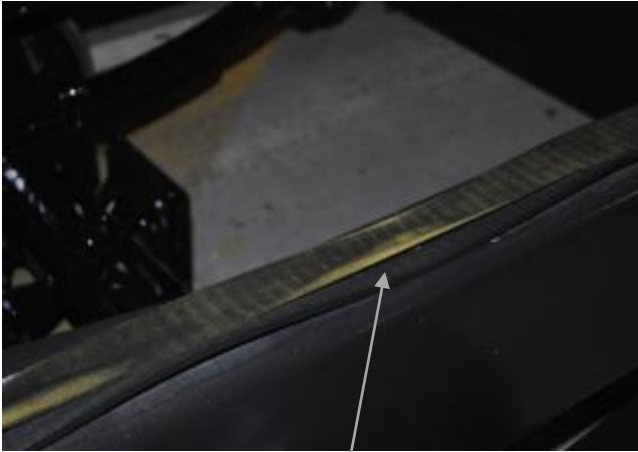

SliderRailPad



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
7 – Loose
8 – Missing
15 - Worn Out/Det.
21 – Corrosion
22 - Rotted

2022 Tandem/TridemHoldDownClip



Tandem/TridemHoldDownClip



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

18 - Weld Broken

2107 WheelBearingAssembly

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 15 - Worn Out/Det.
 24 – Burned Out



WheelBearingAssembly



2110 HubCapPlug

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear



 
HubCapPlug

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
 6 – Leaking
 8 - Missing

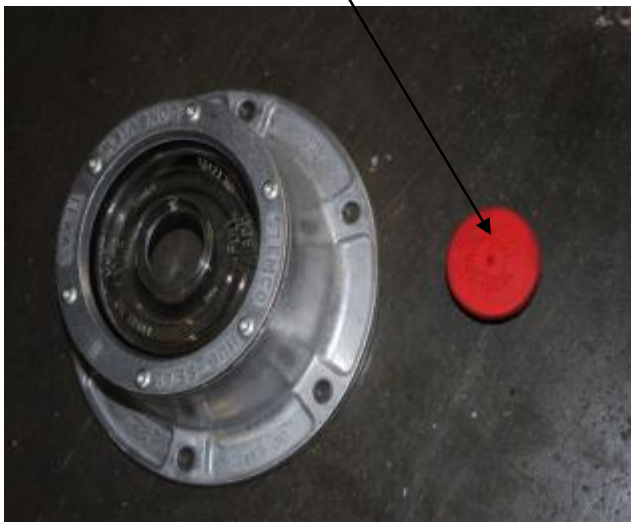

2112 Wheel/Hub



Wheel/Hub



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 – Corrosion
 24 – BurnedOut

2113 Hubometer

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear



Hubometer

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.



2114 HubCapGasket/O'ring



HubCapGasket/O'ring



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 6 – Leaking
 7 – Loose
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.

2115 HubCapAssemblyOilBath



HubCapAssemblyOilBath



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

 
- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 6 – Leaking
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion

2116 HubCapAssemblyGrease

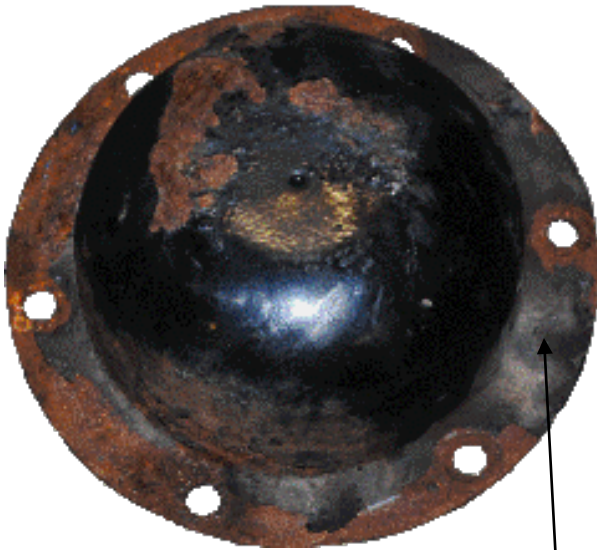

HubCapAssemblyGrease



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

 
- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 6 – Leaking
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion

2125 WheelSeal



WheelSeal

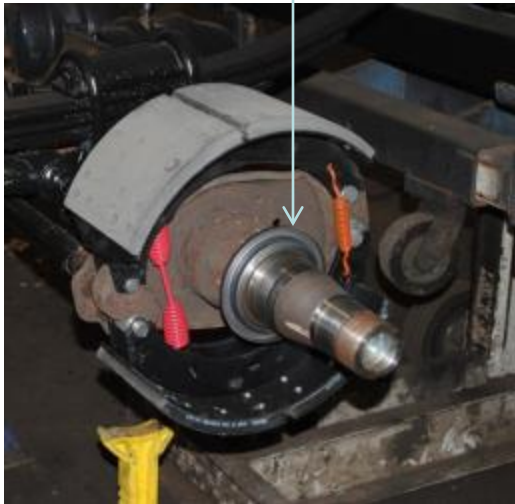

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
6 – Leaking
15 - Worn Out/Det.

2206 Axle



Axle



- **Location Codes**

F – Front
C – Center
Q – Quad
R - Rear

- **Condition Codes**

0 – TemporaryRepair
1 - ReplaceW/New
2 - ReplacedW/Used
3 - ReplaceW/Remfg/Recap
A - Secure

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
15 - Worn Out/Det.
20 - Correct Improper Repair
24 – Burned Out

2210 AxleNut



AxleNut

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 7 – Loose
 15 - Worn Out/Det.
 24 – Burned Out



2211 AxleLockWasher



AxleLockWasher



- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
8 – Missing
15 - Worn Out/Det.

2310 RadiusRodAssemblyFixed

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear



RadiusRodAssemblyFixed

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion



2311 RadiusRodAssemblyAdjustable

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear



RadiusRodAssemblyAdjustable

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion



2408 AirReservoir



AirReservoir



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A – Secure

D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
6 – Leaking

7 – Loose

8 - Missing

2423 BrakeSpider

Not Applicable

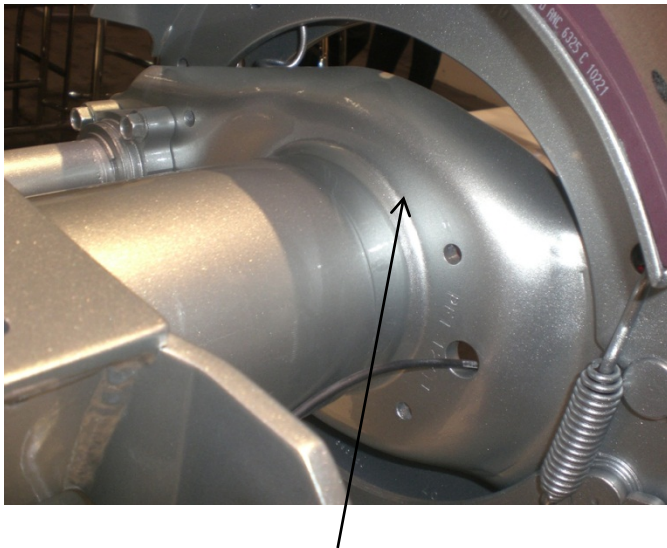

Part of Axle

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
15 - Worn Out/Det.

2424 BrakeCamBushingandSeal

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear



BrakeCamBushingandSeal



- **Condition Code**

1 - ReplaceW/New

- **Why Made Code**

15 - Worn Out/Det.

2435 BrakeChamber

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 6 – Leaking
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 21 - Corrosion



BrakeChamber



2437 BrakeChamberClamp



BrakeChamberClamp



- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 - Missing

2438 SlackAdjuster



SlackAdjuster



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion

2439 AutomaticSlackAdjuster



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 – Corrosion
 32 - Warranty

AutomaticSlackAdjuster



2440 BrakeChamberDiaphragm



BrakeChamberDiaphragm

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Code**

6 - Leaking



2441 AirHoseClamp



- **Location Codes**

F – Front

U – Under

LSF – LEFT SIDE FRONT

LSC – LEFT SIDE CENTER

LSR – LEFT SIDE REAR

RSF – RIGHT SIDE FRONT

RSC – RIGHT SIDE CENTER

RSR – RIGHT SIDE REAR

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

 
8 – Missing

15 - Worn Out/Det.


AirHoseClamp



2442 BrakeChamberMountingBracket

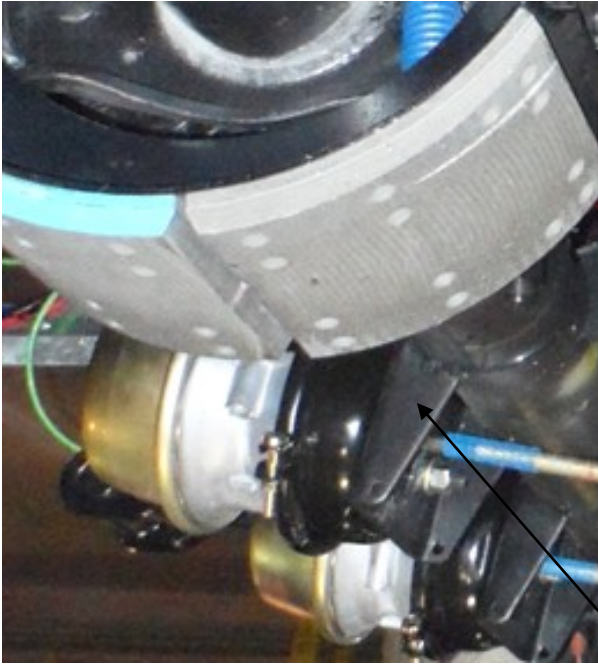

BrakeChamberMountingBracket

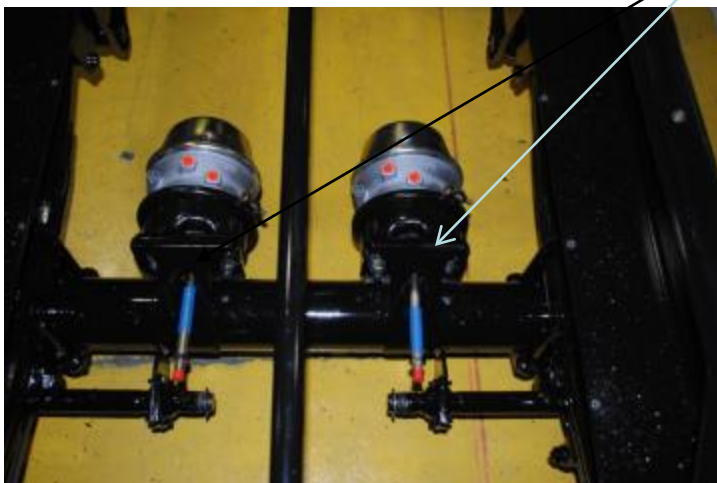 

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

 
- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 8 - Missing
 18 - Weld Broken
 21 - Corrosion

2443 AirHoseSpring

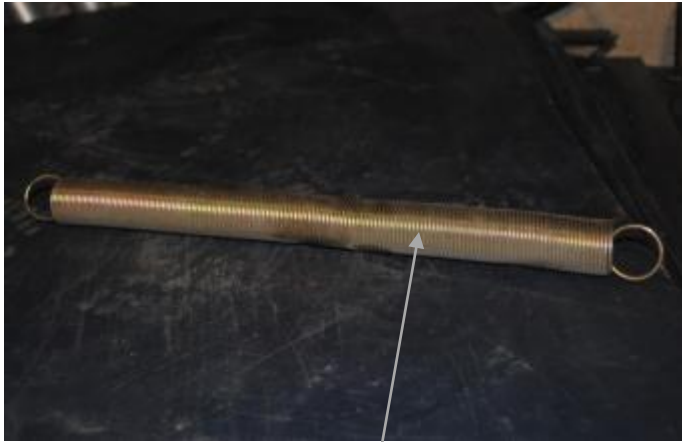

AirHoseSpring



- **Location Codes**

F – Front

U – Under

LSF – LEFT SIDE FRONT

LSC – LEFT SIDE CENTER

LSR – LEFT SIDE REAR

RSF – RIGHT SIDE FRONT

RSC – RIGHT SIDE CENTER

RSR – RIGHT SIDE REAR

- **Condition Codes**

1 - ReplaceW/New

7 – LaborOnly

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

15 - Worn Out/Det.

2444 AirHoseBracket

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

 
2 – Bent

3 – Broken

7 - Loose



AirHoseBracket

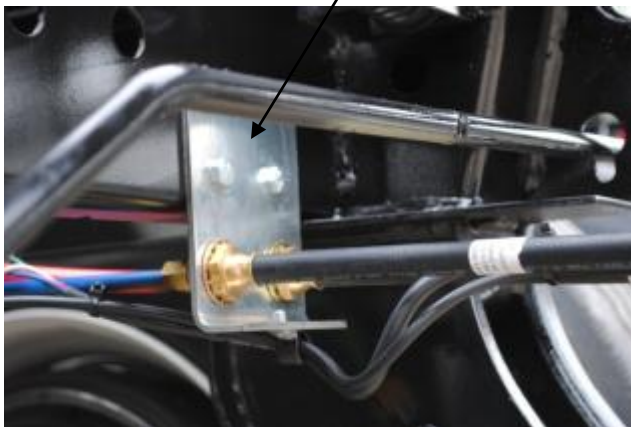

2445 SCamHanger



SCamHanger



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 8 – Straighten
 A – Secure
 D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 18 - Weld Broken

2446 SCam

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 – Missing
15 - Worn Out/Det.
21 - Corrosion

SCam



2452 BrakeDrum



BrakeDrum

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
3 - ReplaceW/Remfg/Recap
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
15 - Worn Out/Det.



2454 GladHandGrommet/Seal

- **Location Codes**

F – Front

R - Rear



- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

3 – Broken

8 – Missing

15 - Worn Out/Det.

GladHandGrommet/Seal



2455 AuxillaryGladHand



AuxillaryGladHand



- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

6 – Leaking

7 – Loose

8 - Missing

2456 EmergencyGladHand(Red)



EmergencyGladHand
(Red)



- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

2457 ServiceGladHand(Blue)



ServiceGladHand
(Blue)



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

2459 GladHandFittings/Hose



- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

7 – Loose

8 - Missing

GladHandFittings/Hose



2465 AnchorPinBushing



AnchorPinBushing

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Code**

15 - Worn Out/Det.



2466 SCamSnapRing

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
15 - Worn Out/Det.



SCamSnapRing



2467 BrakeCleviis

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

 
1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 15 - Worn Out/Det.



BrakeCleviis

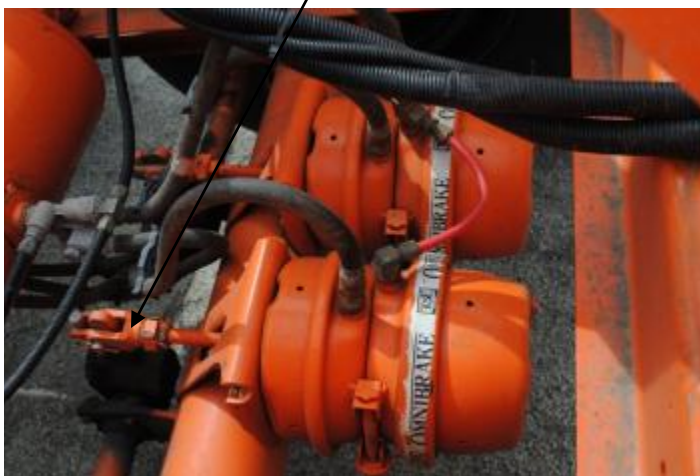

2468 AnchorPin

- **Location Codes**

 
LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
15 - Worn Out/Det.

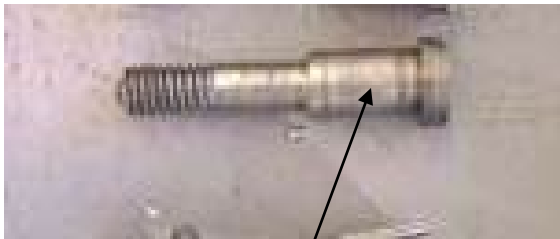

AnchorPin



2469 ClevisPin

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

 
1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
8 – Missing
15 - Worn Out/Det.
21 - Corrosion



ClevisPin

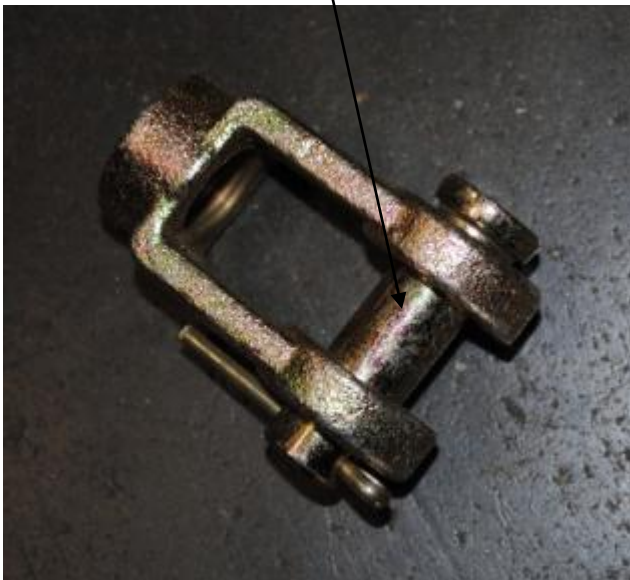

2473 DrainCock/SpitterValve



DrainCock/SpitterValve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

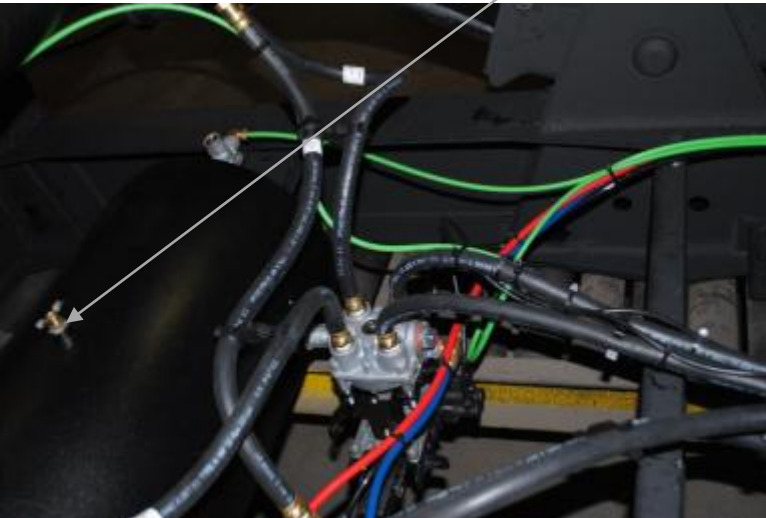

2474 BrakeShoeRoller

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

BrakeShoeRoller

Why Made Codes

1 – AssociatedWithRepairs
7 – Loose
8 – Missing
15 - Worn Out/Det.



2475 BrakeShoeReturnSpring



- Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

BrakeShoeReturnSpring

- Condition Codes**

1 - ReplaceW/New
 A - Secure

- Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.



2476 BrakeShoeRollerClip

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
15 - Worn Out/Det.



BrakeShoeRollerClip



2479 AirHose

- **Location Codes**



AirHose

F – Front
 U – Under
 LSF – Left Side Front
 LSC – Left Side Center
 LSR – Left Side Rear
 RSF – Right Side Front
 RSC – Right Side Center
 RSR – Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 A – Secure
 C - Section

- **Why Made Codes**

1 – AssociatedWithRepairs
 6 – Leaking
 7 – Loose
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion
 22 - Rotted



2480 BrakeShoe

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
15 - Worn Out/Det.
23 – Flex Cracks



BrakeShoe



2483 AirLine/HoseFittings

- **Location Codes**

F – Front

U – Under

LSF – Left Side Front

LSC – Left Side Center

LSR – Left Side Rear

RSF – Right Side Front

RSC – Right Side Center

RSR – Right Side Rear



AirLine/HoseFittings

- **Condition Codes**

1 - ReplaceW/New

A - Secure

Why Made Codes

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

21 - Corrosion



2490 ServiceCombinationRelayValve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

3 - ReplaceW/Remfg/Recap

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.



ServiceCombination
RelayValve



2498 EmergencyRelayValve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

 
7 – Loose

8 – Missing

15 - Worn Out/Det.



EmergencyRelayValve

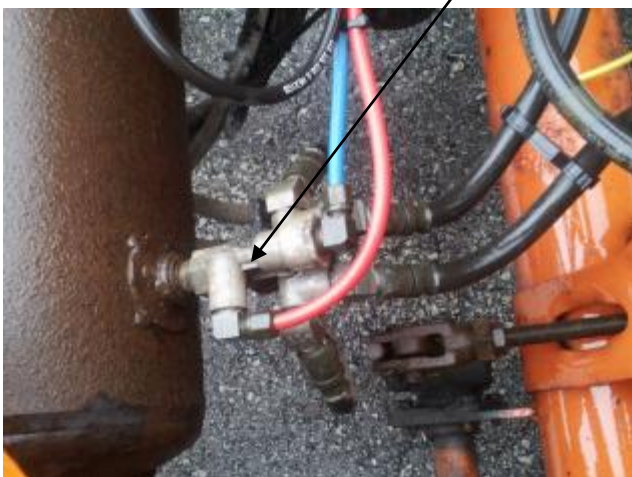

2500 ABSExtensionCable

- **Location Codes**

LF - Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

Why Made Codes

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
15 - Worn Out/Det.
19 - Internal Failure



ABSExtensionCable



2501 ABSSensorKit

- **Location Codes**

LF - Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
15 - Worn Out/Det.
19 - Internal Failure



ABSSensorKit



2502 ABSECUCable



ABSECUCable



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A – Secure

C - Section

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

14 - Cut/Torn

15 - Worn Out/Det.

19 - Internal Failure

2503 ABSECU/ModulatorValveAssy



ABSECU/Modulator
ValveAssy



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

7 - LaborOnly

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

3 - Broken

7 - Loose

8 - Missing

15 - Worn Out/Det.

19 - Internal Failure

2504 ABSValve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

15 - Worn Out/Det.

 
19 - Internal Failure



ABSValve



2505 ABSMountingBracket

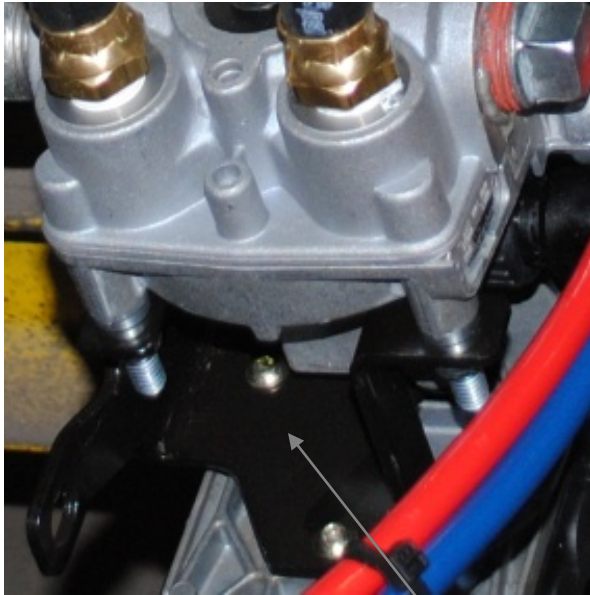

ABSMountingBracket

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure,

D - Weld

- **Why Made Codes**

 
1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

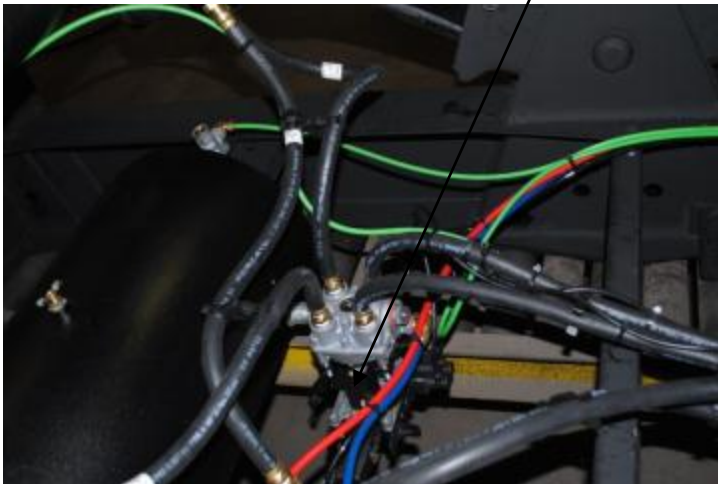

2506 ABSLightIndicator



ABSLightIndicator



- **Location Codes**

F – Front

R - Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 - Loose

8 – Missing

20 – CorrectImproperRepair

24 – Burned Out

2507 ABSECU

- **Location Code**

U - Under



- **Condition Codes**

1 - ReplaceW/New

A - Secure

ABSECU

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

19 - Internal Failure



2508 ABSLightIndicatorLED

- Location Code**

F – Front
R -Rear

- Condition Codes**

1 - ReplaceW/New
A - Secure

- Why Made Codes**

 
1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
20 – CorrectImproperRepair
24 - Loose



ABSLightIndicatorLED



2509 ABSIn-LineFilter

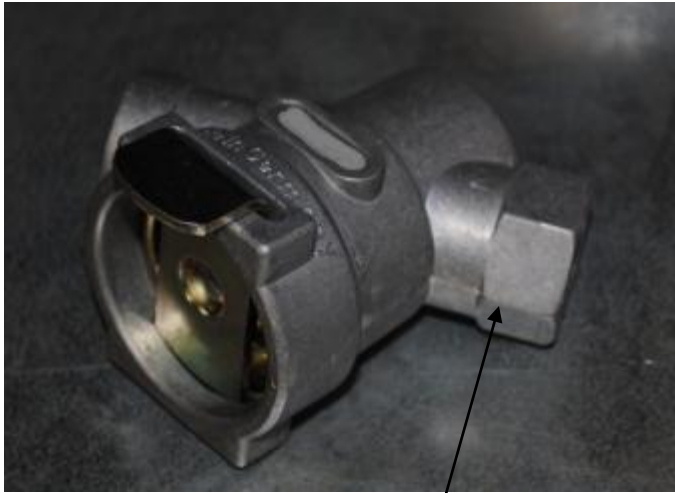

ABSIn-LineFilter

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

15 - Worn Out/Det.



2601 TireInflationSystemLongHose

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear



TireInflationSystemLong
Hose

- **Condition Codes**

1 - ReplaceW/New
 A - Secure



- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 6 – Leaking
 7 – Loose
 8 – Missing
 14 - Cut/Torn

2602 TireInflationSystemShortHose

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 6 – Leaking
 7 – Loose
 8 – Missing
 14 - Cut/Torn



TireInflationSystemShort
Hose



2603 TireInflationSystemControlBox



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

TireInflationSystemControlBox



- **Why Made Codes**

1 – AssociatedWithRepairs

 
3 – Broken

7 – Loose

8 – Missing

19 - Internal Failure

2604 TireInflationSystemValve("T")

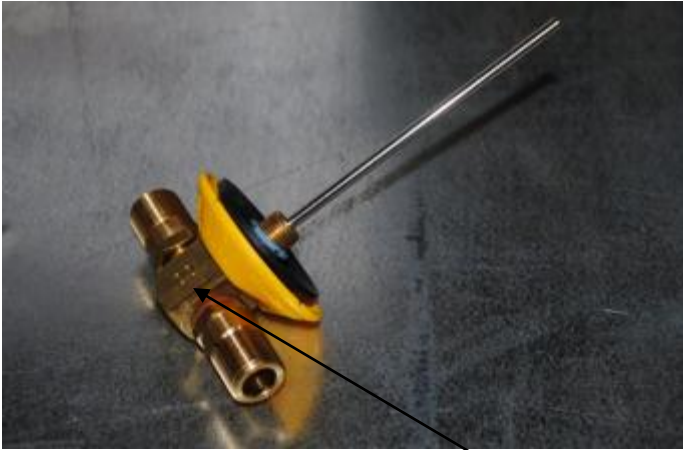

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

TireInflationSystemValve("T")



- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 6 – Leaking
 7 – Loose
 8 - Missing

2605 TireInflationSystemHubCap



TireInflationSystemHubCap



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 6 – Leaking
 7 – Loose
 8 - Missing

2606 TireInflationSystemStater/Filter

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

 
TireInflationSystemStater/Filter

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 6 – Leaking
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.

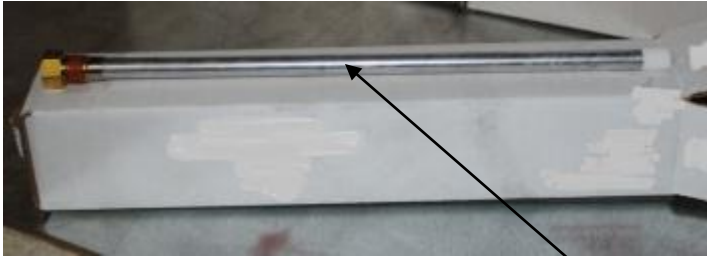

2607 TireInflationSystemTransmitLine



TireInflationSystemTransmitLine

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 - Loose
 8 - Missing



2608 TireInflationSysControlBoxBracket



TireInflationSysControl
BoxBracket



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 - Loose

8 - Missing

2609 TireInflationSysProtectorValve



TireInflationSysProtector
Valve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

21 - Corrosion



2610 TireInflationSysIn-LineFilter

- **Location Code**

U - Under

2614-SelfDrainingFilter

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

21 - Corrosion

2611 TireInflationSysReliefValveFlapper

- **Location Code**

U - Under

**2604-Part of Valve “T” not
separate**

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

21 - Corrosion

2612 TireInflationSysDeflectorShield

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

 
- **Why Made Codes**

1 – AssociatedWithRepairs


2 – Bent

7 – Loose

8 - Missing

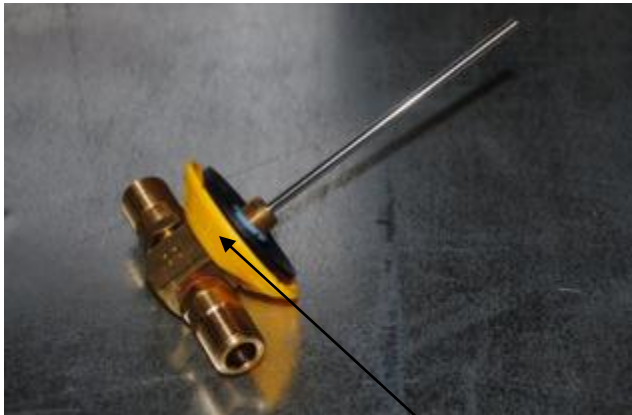

TireInflationSysDeflector
Shield

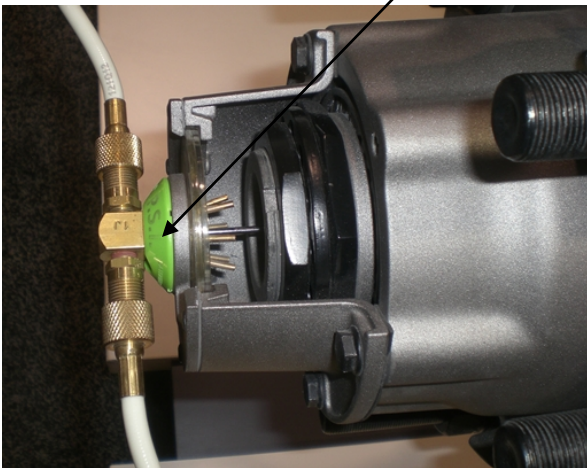 

2613 TireInflationSystemIndicatorLight

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 - Broken

7 – Loose

8 – Missing

20 - CorrectImproperRepair

24 – Burned Out



TireInflationSystem
IndicatorLight



2614 TireInflSystemSelfDrainingFilter



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

TireInflSystemSelfDrainingFilter



- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

21 - Corrosion

2615 TireInflationSystemControlBoxLid

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

 
3 – Broken

7 – Loose

8 - Missing



TireInflationSystemControl
BoxLid

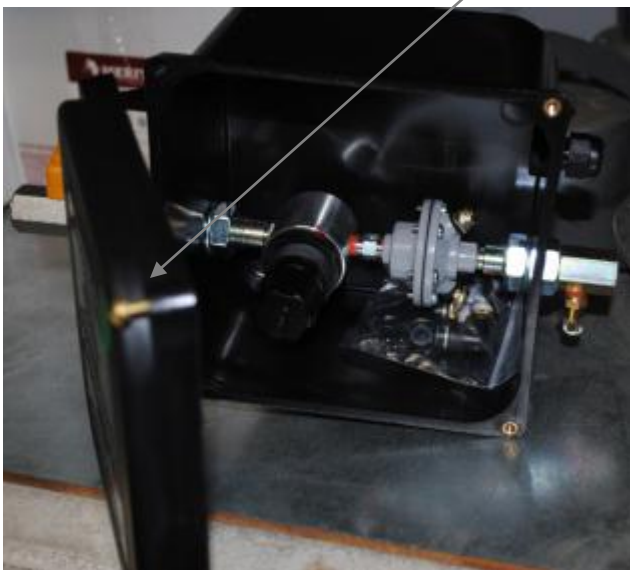

2616 TireInflSysPressureRegValve



TireInflSysPressure
RegValve



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

19 - Internal Failure

2617 TireInflSysFlowSensingSwitch



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

TireInflSysFlowSensingSwitch



- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

19 - Internal Failure

2618 TireInflSysBulkheadCheckValve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

TireInflSysBulkhead
CheckValve

- **Why Made Codes**

 
1 – AssociatedWithRepairs

3 – Broken


7 – Loose

8 – Missing

19 - Internal Failure

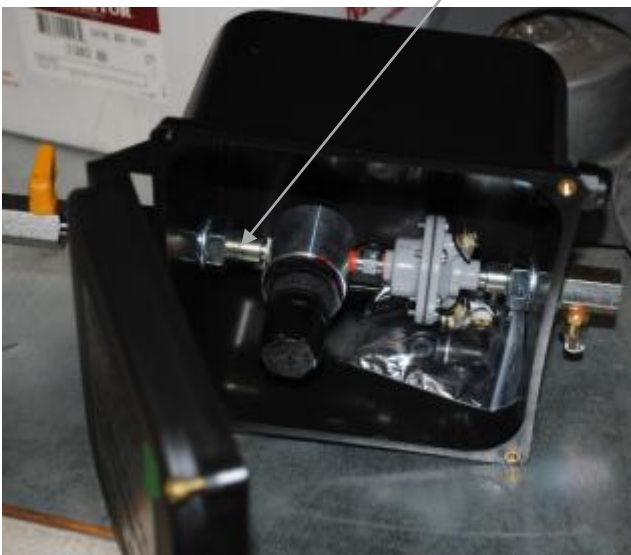

2619 TireInflSysShutOffValve

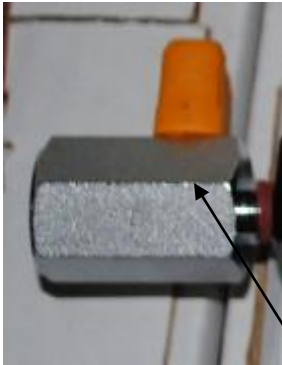 

TireInflSysShutOffValve

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

 
19 - Internal Failure



2620 TireInflSysFlowSensingFitting(BulkheadFitting)



TireInflSysFlowSensing
Fitting(BulkheadFitting)

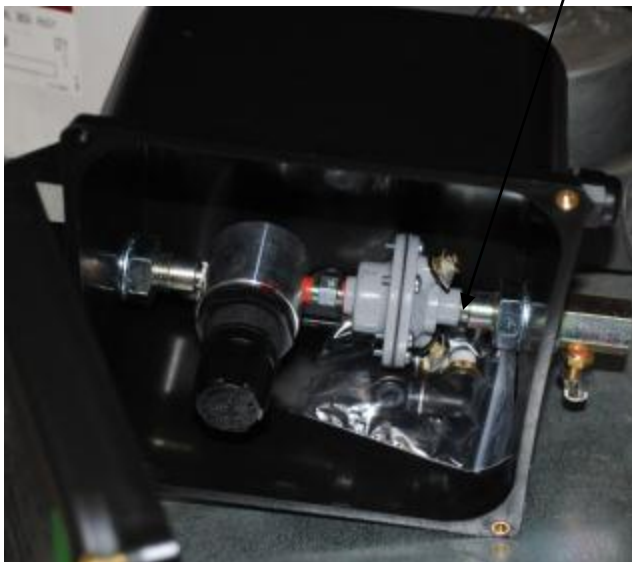

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

19 - Internal Failure

2621 TireInflSystemLightIndicator-LED

- **Location Code**

U - Under

Condition Codes

1 - ReplaceW/New
A - Secure



TireInflSystemLightIndicator-LED



- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
20 – CorrectImproperRepair
24 – BurnedOut

2703 SpringHanger



Front



Rear

SpringHanger



Front



Rear

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 8 - Missing
 18 - Weld Broken
 20 - Correct Improper Repair
 21 - Corrosion

2704 SpringHangerRetainerBoltandNut



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

 
SpringHangerRetainerBoltandNut

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 21 - Corrosion

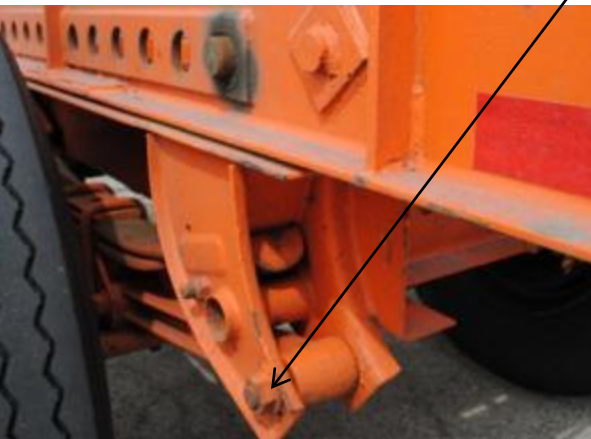

2705 SpringUBolt&Nuts



SpringUBolt&Nuts



- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 - Bent
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 21 - Corrosion

2706 SpringHangerStabilizer

- **Location Codes**

 
LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 A - Secure
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 15 - Worn Out/Det.
 18 - Weld Broken
 21 - Corrosion

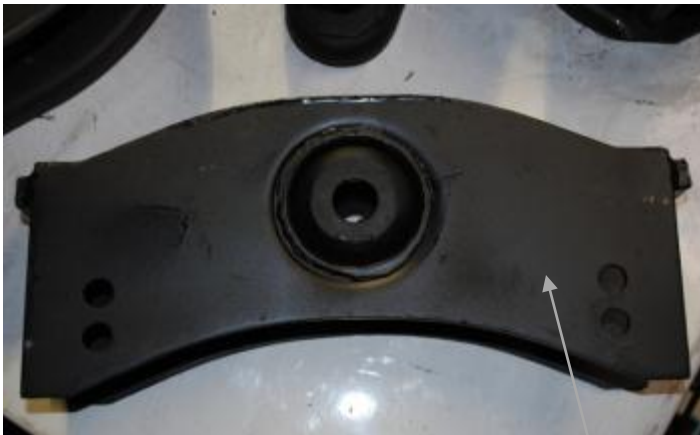

SpringHangerStabilizer



2707 SpringTopPlate



SpringTopPlate



- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
21 - Corrosion

2708 SpringSeat

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 21 - Corrosion



 
SpringSeat



2709 SpringBottomPlate



SpringBottomPlate

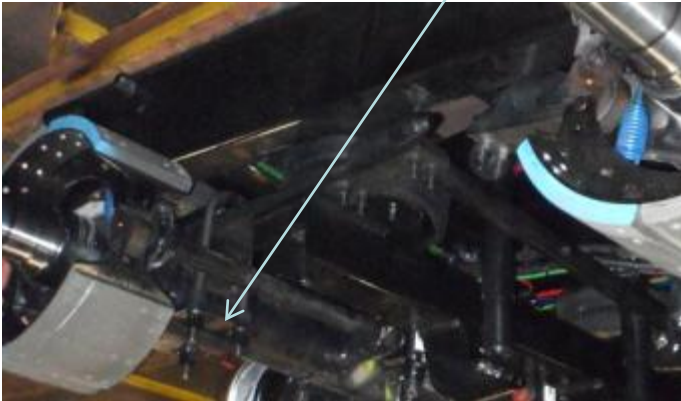

- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
21 - Corrosion

2710 SuspensionSpring

- **Location Codes**

LF - Left Front
 LC - Left Center
 LQ - Left Quad
 LR - Left Rear
 RF - Right Front
 RC - Right Center
 RQ - Right Quad
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 3 - ReplaceW/Remfg/Recap
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 8 – Missing
 15 - Worn Out/Det.
 20 - Correct Improper Repair
 21 - Corrosion



SuspensionSpring



2711 SpringCenterBolt



SpringCenterBolt



- **Location Codes**

LF - Left Front
LC - Left Center
LQ - Left Quad
LR - Left Rear
RF - Right Front
RC - Right Center
RQ - Right Quad
RR - Right Rear

 
- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 - Missing

2800 AirSprings

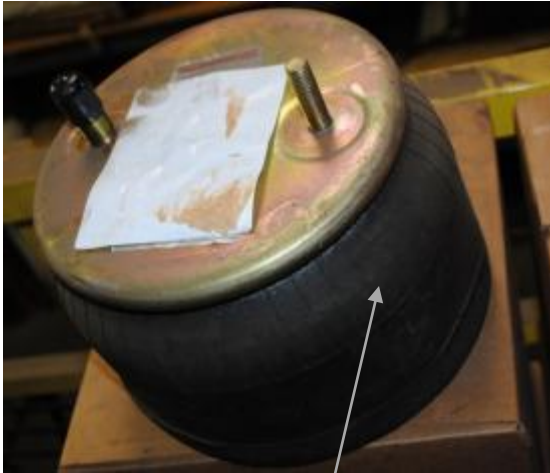

AirSprings

- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 – Missing

14 - Cut/Torn

15 - Worn Out/Det.



2801 Axle/BeamWeldment

- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New,

D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 – Missing

 
18 - Weld Broken



Axle/BeamWeldment



2802 FrameBracketChannel

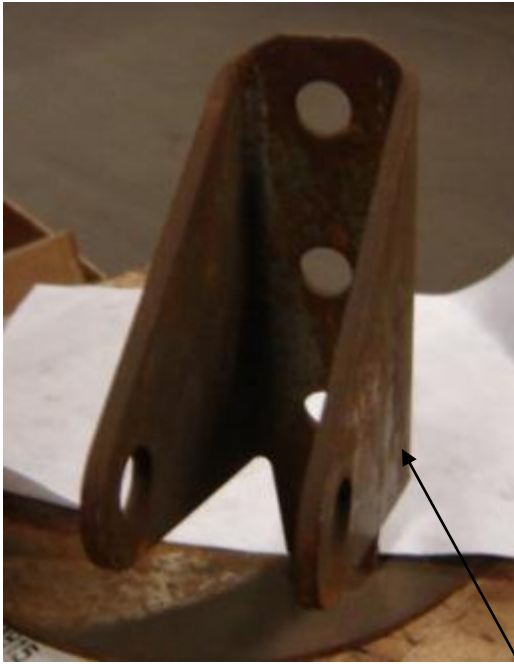

FrameBracketChannel



- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

 
8 – Missing

18 - Weld Broken

2803 FrameBracketBrace



FrameBracketBrace

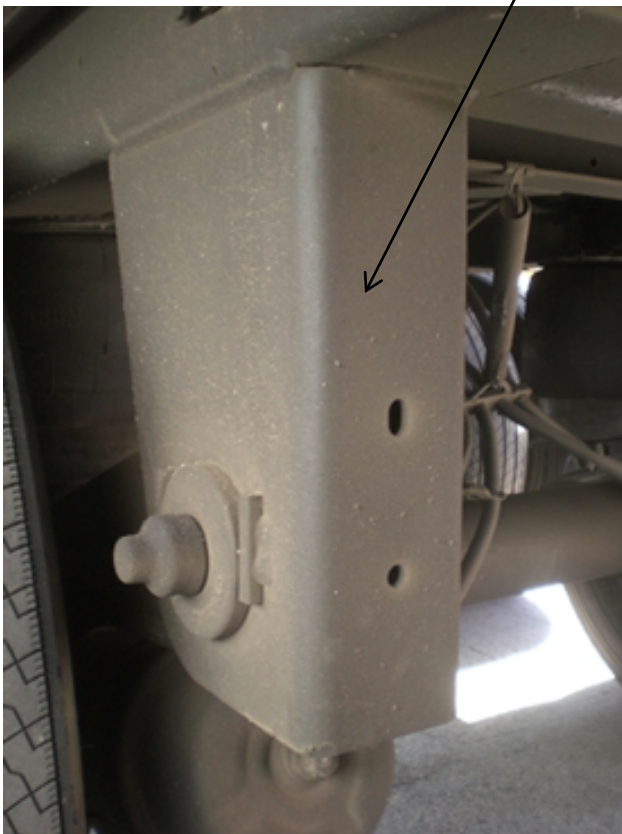

- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 – Missing

18 - Weld Broken

2804 AirSpringPlate



AirSpringPlate



- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 - Missing

2805 AirSpringSpacer



AirSpringSpacer

- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Code**

1 - ReplaceW/New



 
- **Why Made Codes**

1 – AssociatedWithRepairs


3 – Broken

8 - Missing

2807 AlignmentCollars

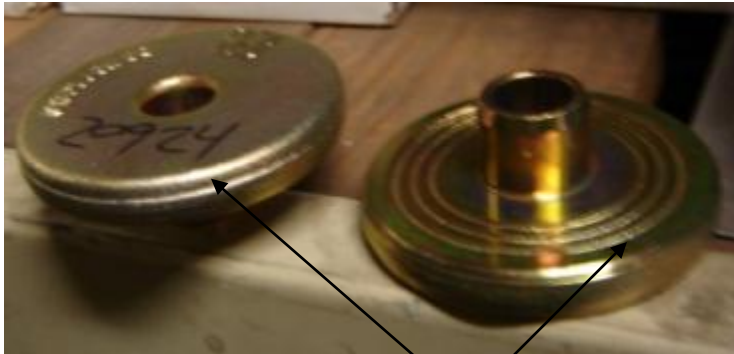

AlignmentCollars

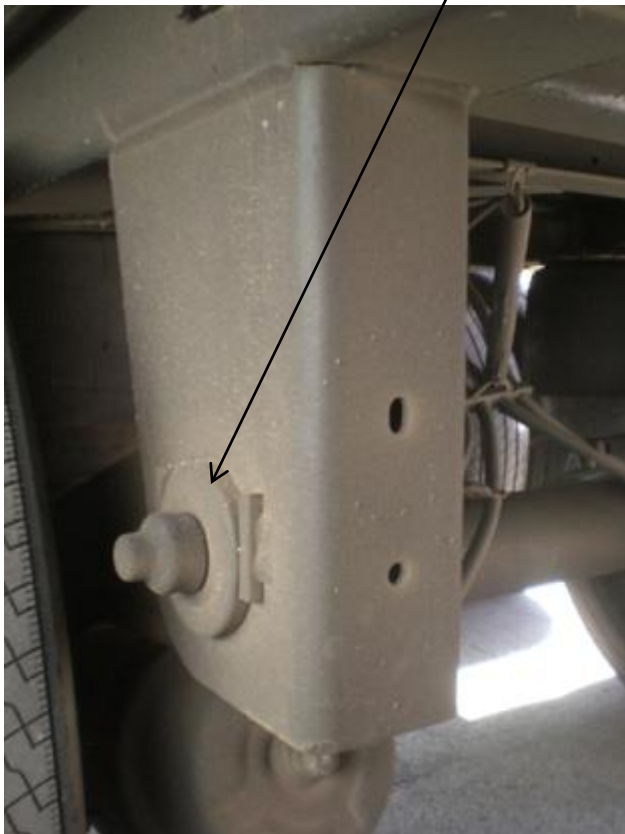 

- **Location Codes**

LF – Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 8 – Missing
 14 - Cut/Torn
 15 - Worn Out/Det.

2808 Bushing/TubeSpacers

- **Location Codes**

LF – Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear



Bushing/TubeSpacers

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
14 - Cut/Torn
15 - Worn Out/Det.



2809 ShockAbsorber

- **Location Codes**

F – Front
R - Rear
LF – Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear



ShockAbsorber



- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
15 - Worn Out/Det.

2810 ShockTower/Bracket



ShockTower/Bracket



- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 – Missing

15 - Worn Out/Det.

18 - Weld Broken

2811 ReboundLimiter



ReboundLimiter

- **Location Codes**

LF – Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

- **Condition Code**

 
1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
15 - Worn Out/Det.



2812 UpperControlArmAssembly

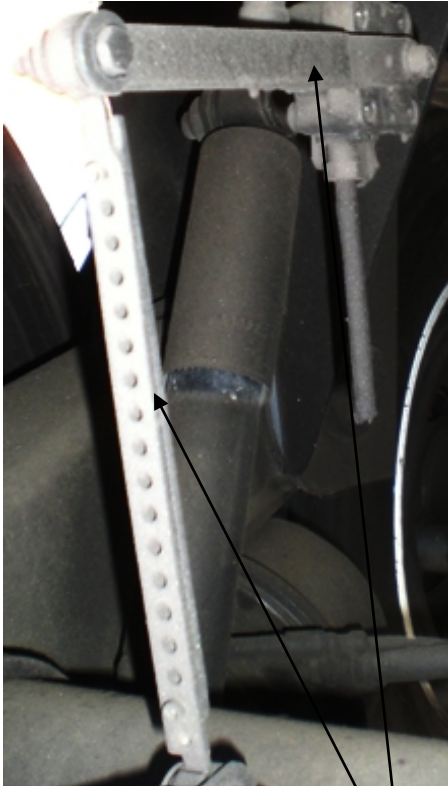

- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

UpperControlArm
Assembly



2813 AdjustableLowerControlArmAssembly

- **Location Codes**

LF – Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear



AdjustableLowerControl
ArmAssembly

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 - Missing



2814 NonAdjustableLowerControlArmAssembly

 
- **Location Codes**

LF – Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

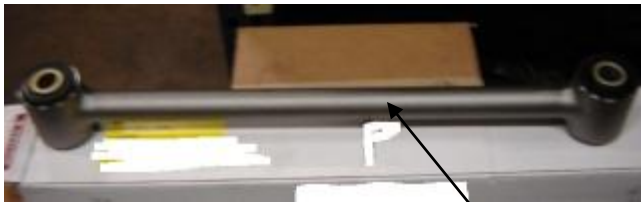

NonAdjustableLower
ControlArmAssembly

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
3 – Broken

7 – Loose

8 - Missing



2815 HeightControlValve

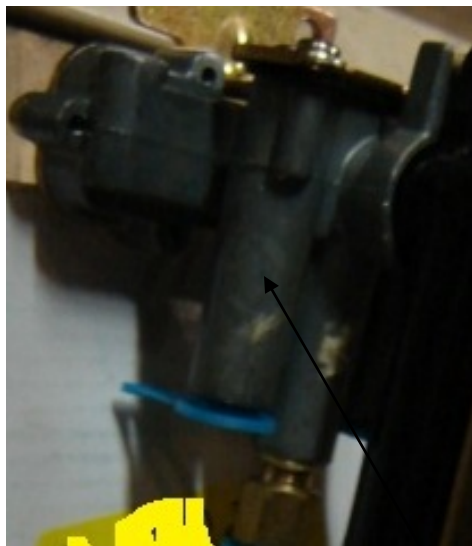

HeightControlValve



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

6 – Leaking

7 – Loose

8 – Missing

15 - Worn Out/Det.

2816 TrailingArmAssembly



- **Location Codes**

LF – Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

TrailingArmAssembly



- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 - Missing

3107 DollyWheel



DollyWheel

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 - Missing



3108 AxleHousing



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

AxleHousing



- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
8 - Missing
18 - Weld Broken

3109 DollyWheelAxle

- **Location Codes**

LS - Left Side

RS - Right Side



DollyWheelAxle

- **Condition Code**

1 - ReplaceW/New



- **Why Made Codes**

 
1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 - Missing

3110 AxleCollar

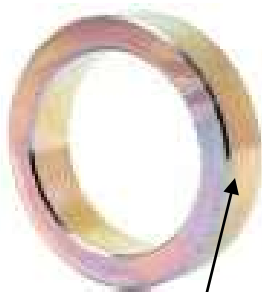

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

A - Secure

AxleCollar



- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

3111 SandShoe



SandShoe



• Location Codes

LS - Left Side
RS - Right Side

•Condition Codes

1 - ReplaceW/New
8 – Straighten
A - Secure,Weld

•Why Made Codes

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
18 - Weld Broken
20 - Correct Improper Repair

3112 SandShoeandAxle



• Location Codes

LS - Left Side
RS - Right Side

SandShoeandAxle



•Condition Codes

1 - ReplaceW/New
8 - Straighten
A - Secure,Weld

•Why Made Codes

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
18 - Weld Broken
20 - Correct Improper Repair

3113 SandShoeAxle



SandShoeAxle



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
D - Weld

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
18 - Weld Broken

3119 LandingLegBraceBracket(Ear)



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

LandingLegBraceBracket(Ear)



- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 – Missing
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion

3120 LandingLegDiagonalBrace



- **Location Codes**

LS - Left Side
RS - Right Side

LandingLegDiagonalBrace



- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure,Weld

- **Why Made Codes**

2 - Bent
3 - Broken
7 - Loose
8 - Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion

3121 LandingLegCrossChannelUpper

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure,Weld

- **Why Made Codes**

2 - Bent
3 - Broken
7 - Loose
8 - Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion



LandingLegCrossChannel
Upper



3141 LandingLegCrossBraceLower



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure,Weld

LandingLegCrossBrace
Lower



- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

21 - Corrosion

3144 LandingLegMountingBracket

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure,Weld

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

21 - Corrosion



LandingLegMountingBracket



3149 GearboxCover



GearboxCover



- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut/Torn

20 - Correct Improper Repair

21 - Corrosion

3150 CrankHandleRetainerClip



CrankHandleRetainerClip



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
8 - Missing
18 - Weld Broken

3153 CrankHandle

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

 
2 – Bent

3 – Broken

7 – Loose

8 – Missing

20 - Correct Improper Repair

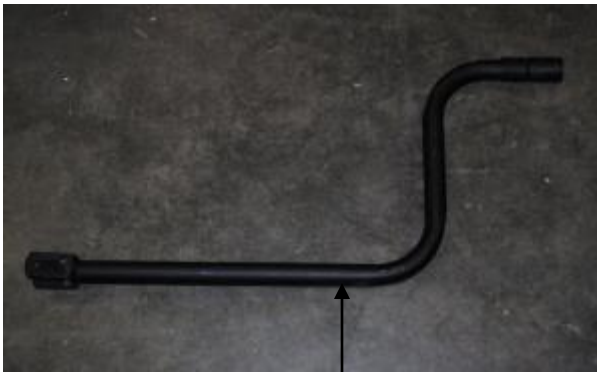

CrankHandle



3160 Lower/InnerLeg

- **Location Codes**

LS - Left Side

RS - Right Side

Not sold separately

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

- **Why Made Codes**

2 – Bent

3 – Broken

8 – Missing

20 - Correct Improper Repair

3161 LandingLeg,CompleteSet,WithoutBraces

- **Location Code**

U - Under

Not applicable

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

2 – Bent

3 – Broken

8 – Missing

19 - Internal Failure

20 - Correct Improper Repair

3162 LandingLeg,CompleteSet,WithBraces

- **Location Code**

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
19 - Internal Failure
20 - Correct Improper Repair



LandingLeg,CompleteSet,
WithBraces



3163 LandingLeg,Non-GearSide



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure
D - Weld

LandingLeg,Non-GearSide



- **Why Made Codes**

2 - Bent
3 - Broken
7 - Loose
8 - Missing
18 - Weld Broken
19 - Internal Failure
20 - Correct Improper Repair

3166 LandingLeg,GearSide



LandingLeg, GearSide



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure,Weld

- **Why Made Codes**

2 - Bent
3 - Broken
7 - Loose
8 - Missing
18 - Weld Broken
19 - Internal Failure
20 - Correct Improper Repair

3171 CushionFoot/Pad



CushionFoot/Pad



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
20 - Correct Improper Repair

 
3183 CrossShaft/TimingBar



CrossShaft/TimingBar

- **Location Code**

U - Under

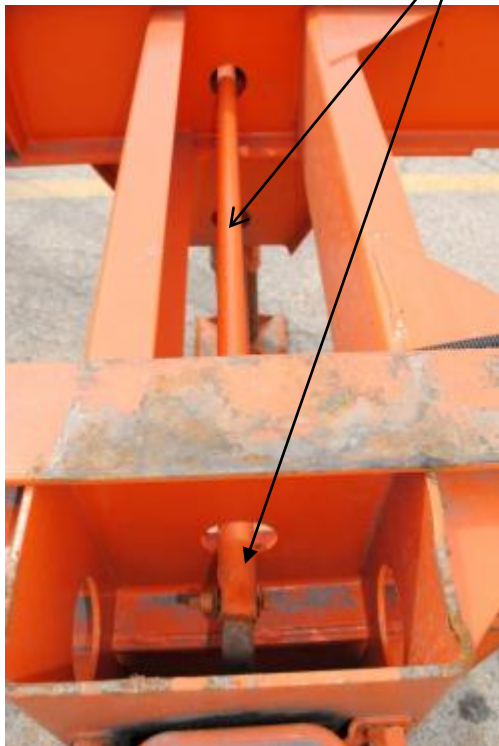

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

15 - Worn Out/Det.

20 - Correct Improper Repair

21 - Corrosion

3214 ReductionGear



ReductionGear

- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
19 - Internal Failure



3215 GearPin

- **Location Codes**

LS - Left Side

RS - Right Side



GearPin

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
3 – Broken

15 - Worn Out/Det.

19 - Internal Failure



3218 CrankShaft

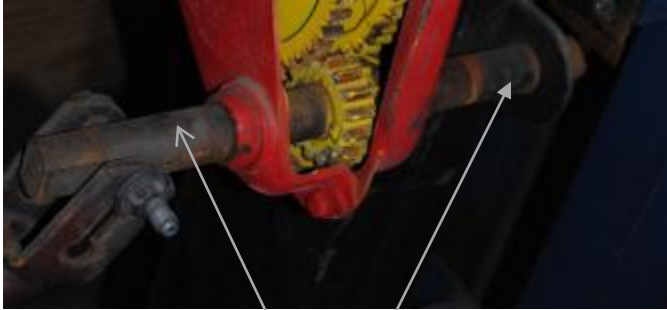

CrankShaft



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 - Missing

3219 LandingGearShaftBushing



LandingGearShaftBushing



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
15 - Worn Out/Det.

3226 PinionShaft



PinionShaft

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

 
2 – Bent

3 – Broken

19 - Internal Failure



3228 UpperLegCover(DustCover)

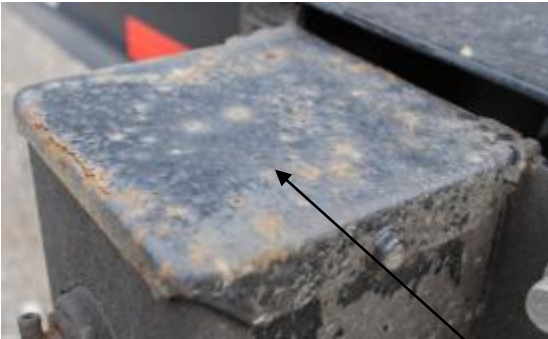

- **Location Codes**

LS - Left Side

RS - Right Side

UpperLegCover(DustCover)



- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

 
3 - Broken

7 - Loose

8 - Missing

20 - Correct Improper Repair

3350 DOT/MOTUnder-rideGuard

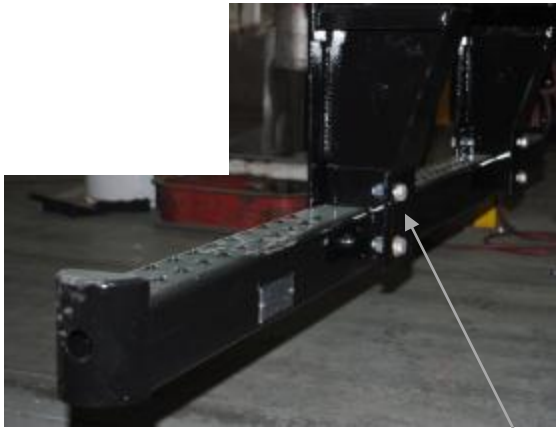

- **Location Code**

R - Rear

DOT/MOTUnder-rideGuard



- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion

3351 FillerPlate



FillerPlate



- **Location Code**

R – Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 – Missing
18 - Weld Broken

3352 PintleHook



- **Location Code**

R – Rear



- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure

PintleHook

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

 
7 – Loose

8 – Missing

20 - Correct Improper Repair



3353 DOT/MOTBumperHorizontal-4"channel

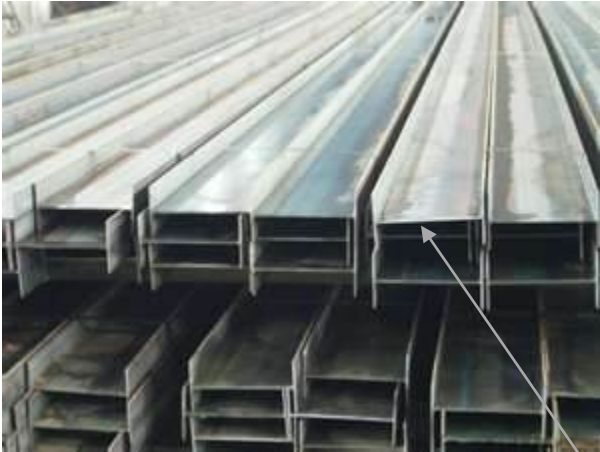

DOT/MOTBumperHorizontal-4"channel



- **Location Code**

R – Rear

 
- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion

3354 DOT/MOTBumperUpright-4"channel

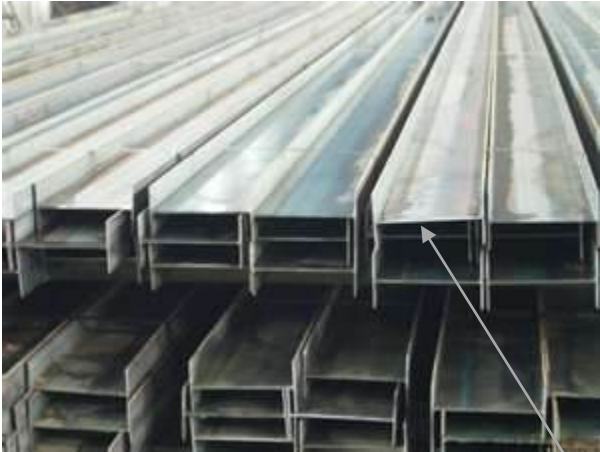

DOT/MOTBumperUpright-4"channel



- **Location Code**

R – Rear

 
- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion

3355 DOT/MOTBumperHorizontal-4"Tubular

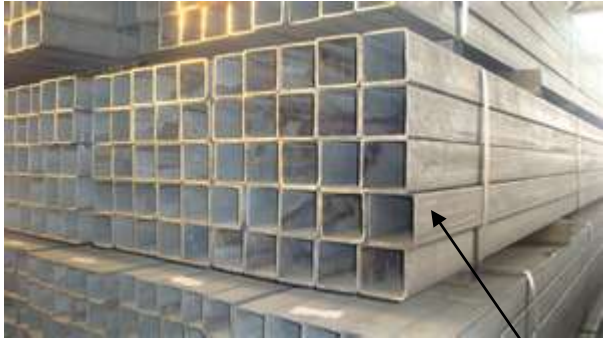

- **Location Code**

R – Rear

DOT/MOTBumperHorizontal-4"Tubular

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion



3358 DOTBumperHorizontal-BoltOn

- **Location Code**

R – Rear



DOTBumperHorizontal-BoltOn

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

D - Weld



- **Why Made Codes**

2 – Bent

3 – Broken

8 – Missing

14 - Cut/Torn

18 – WeldBroken

20 – CorrectImproperRepair

21 - Corrosion

3360 DockBumper



DockBumper



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
14 - Cut/Torn
15 - Worn Out/Det.
20 - Correct Improper Repair

3403 Mudflap



MudFlap



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

7 – Loose

8 – Missing

14 - Cut/Torn

15 - Worn Out/Det.

20 - Correct Improper Repair

3405 MudflapBracket



MudFlapBracket



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure,Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

3407 MudflapStrap

- **Location Codes**

LR - Left Rear
RR - Right Rear

Not Applicable

 
- **Condition Codes**

1 - ReplaceW/New
8 - Straighten

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 - Missing

3410 LicensePlateBracket

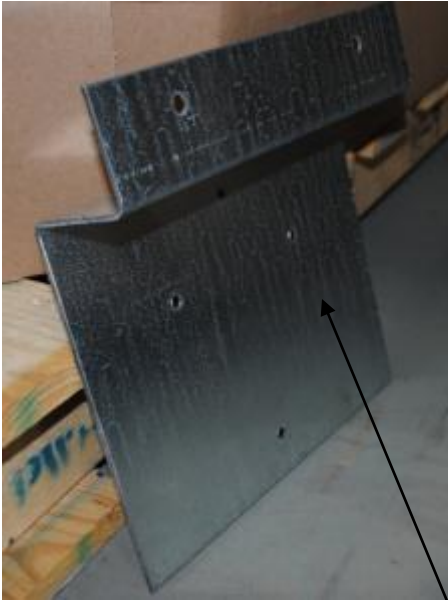

- **Location Code**

R - Rear

LicensePlateBracket

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
21 - Corrosion



3455 LicensePlate

- **Location Code**

R - Rear



LicensePlate

- **Condition Codes**

1 - ReplaceW/New

7 - LaborOnly

A - Secure

- **Why Made Codes**

7 - Loose

8 - Missing



3506 KingPin

- **Location Code**

U - Under



- **Condition Codes**

1 - ReplaceW/New,Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 – Missing

15 - Worn Out/Det.

18 - Weld Broken

KingPin



3558 GridSection



GridSection

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

D – Weld

- **Why Made Codes**

2 – Bent

3 – Broken

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

21 - Corrosion



3560 PickUpPlate

- **Location Codes**

F – Front

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten,Weld

- **Why Made Codes**

2 – Bent

3 – Broken

18 - Weld Broken

20 - Correct Improper Repair

21 - Corrosion



PickUpPlate



3565 GridExtensionPlate

- **Location Code**

 
U - Under

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

2 – Bent
3 – Broken
8 – Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair

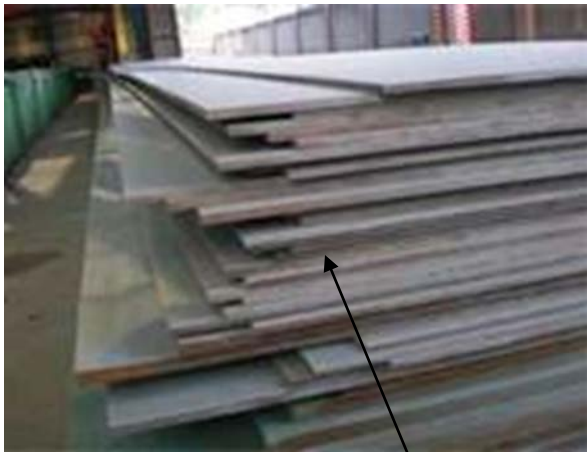

GridExtensionPlate

 


3650 Crossmember-Container

- **Location Code**

U - Under

Crossmember-Container

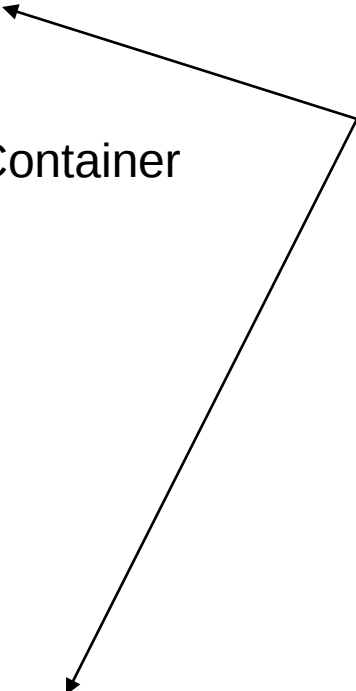

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten,Weld

- **Why Made Codes**

2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair
21 - Corrosion

3653 CrossmemberClip



- **Location Code**
U - Under

- **Condition Codes**
1 - ReplaceW/New
A - Secure,Weld

CrossmemberClip



- **Why Made Codes**
1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
18 - Weld Broken
21 - Corrosion

3654 CrossmemberBayArea



CrossmemberBayArea



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure,Weld

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

3655 CrossmemberOverLegs



CrossmemberOverLegs



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A - Secure,Weld

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

3656 CrossmemberOverTandem



CrossmemberOver
Tandem

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut/Torn

18 - Weld Broken

20 - Correct Improper Repair

 


3657 Crossmember,Tubular,Trailer

- **Location Code**

U - Under

Crossmember,Tubular,
Trailer

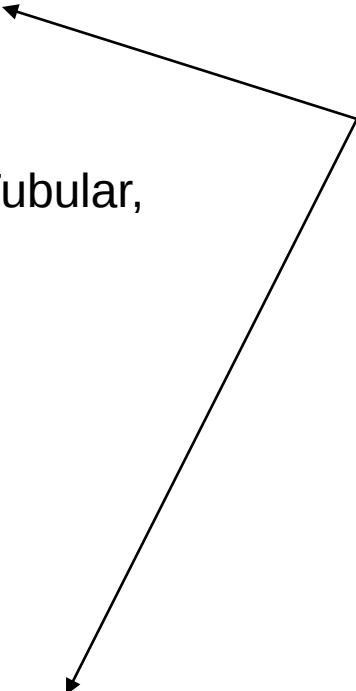

- **Condition Codes**

1 - ReplaceW/New
8 – Straighten
A – Secure
D - Weld

- **Why Made Codes**

 
2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair

3658 CrossmemberTransitional(traileronly)

- **Location Code**

U - Under

CrossmemberTransitional
(traileronly)

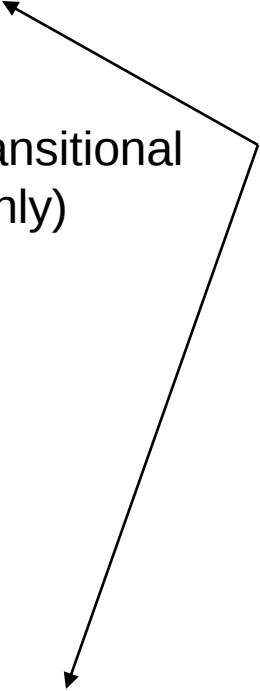

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure
D - Weld

- **Why Made Codes**

2 - Bent
3 - Broken
7 - Loose
8 - Missing
14 - Cut/Torn
18 - Weld Broken
20 - Correct Improper Repair

4109 CircuitBreaker

- **Location Code**

F - Front



CircuitBreaker

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

 
1 – AssociatedWithRepairs
3 – Broken
8 – Missing
24 – Burned Out



4112 ElectricalWire



ElectricalWire

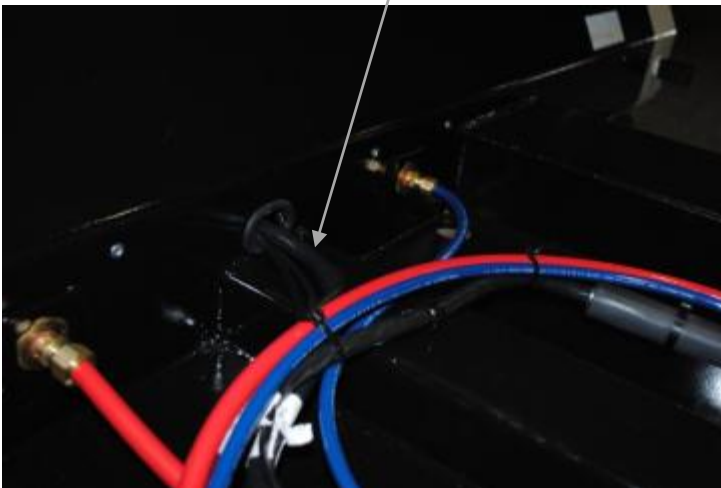

- **Location Codes**

F- Front
R – Rear
U – Under
LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
A - Secure
C - Section

- **Why Made Codes**

1 – AssociatedWithRepairs
7 – Loose
8 – Missing
14 - Cut/Torn
21 – Corrosion
24 – Burned Out

4130 BulbandLens



BulbandLens



- **Location Codes**

F – Front
R – Rear
LS - Left Side
RS - Right Side

 
- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 – Missing
24 – Burned Out

4132 TailLightBracket

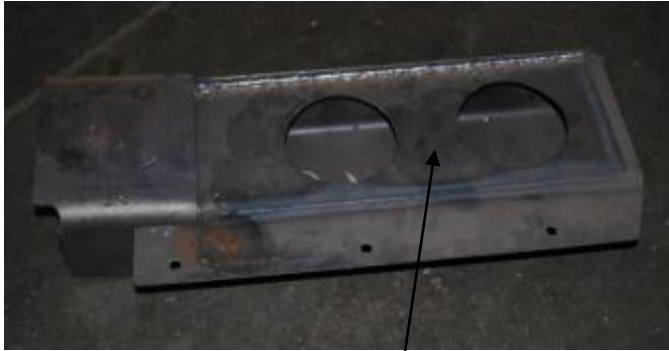

- **Location Codes**

LR - Left Rear
RR - Right Rear

TailLightBracket

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
18 - Weld Broken
21 - Corrosion



4133 LicensePlatelight

- **Location Code**

R - Rear

4149-4150 License Plate Lights

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

24 – Burned Out

4134 MarkerLightBulb



MarkerLightBulb



- **Location Codes**

F – Front
 R – Rear
 LSF – Left Side Front
 LSC – Left Side Center
 LSR – Left Side Rear
 RSF – Right Side Front
 RSC – Right Side Center
 RSR – Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 8 – Missing
 24 – Burned Out

4136 SideTurnSignalLight-LED

- **Location Codes**

LS – Left Side
RS – Right Side



SideTurnSignalLight-LED

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 - Loose
8 – Missing
24 – BurnedOut



4137 TailLightBulb



TailLightBulb



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4139 WireHarness



- **Location Codes**

F – Front
 R – Rear
 U – Under
 LS - Left Side
 RS - Right Side

WireHarness



- **Condition Codes**

1 - ReplaceW/New
 A - Secure
 C - Section

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 14 - Cut/Torn
 21 – Corrosion
 24 – Burned Out

4140 TailLightBulb,Lens,Retainer



TailLightBulb,Lens,Retainer



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

 
- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 - Missing

4141 MarkerLens

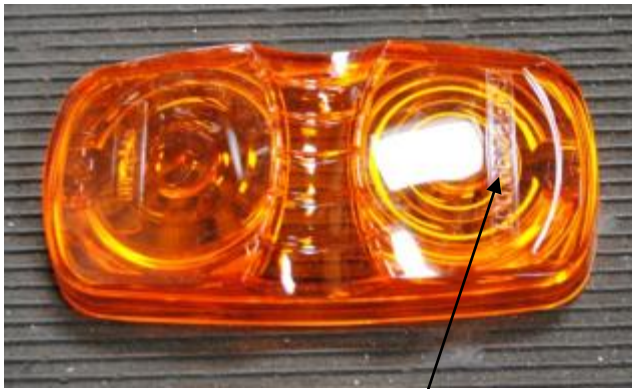

MarkerLens



- **Location Codes**

F – Front
 R – Rear
 LSF – Left Side Front
 LSC – Left Side Center
 LSR – Left Side Rear
 RSF – Right Side Front
 RSC – Right Side Center
 RSR – Right Side Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 8 - Missing

4142 TailLightLens



TailLightLens



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 - Missing

4143 LicensePlateLens

- **Location Code**

R - Rear

4149-4150 License Plate Lights

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 - Missing

4144 SideTurnSignalAssembly



SideTurnSignalAssembly



- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

24 – Burned Out

4145 MarkerLightAssembly-BulbType



MarkerLightAssembly-
BulbType



- **Location Codes**

F – Front
R – Rear
LSF – Left Side Front
LSC – Left Side Center
LSR – Left Side Rear
RSF – Right Side Front
RSC – Right Side Center
RSR – Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

 
- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4146 MarkerLightAssembly-SealBeam



MarkerLightAssembly-
SealBeam

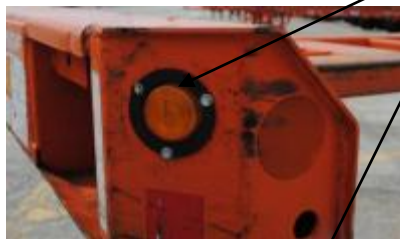

• Location Codes

F – Front
 R – Rear
 LSF – Left Side Front
 LSC – Left Side Center
 LSR – Left Side Rear
 RSF – Right Side Front
 RSC – Right Side Center
 RSR – Right Side Rear

• Condition Codes

1 - ReplaceW/New
 A - Secure

• Why Made Codes

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 8 – Missing
 24 – Burned Out

4147 MarkerLight-LED

- **Location Codes**

F – Front
 R – Rear
 LSF – Left Side Front
 LSC – Left Side Center
 LSR – Left Side Rear
 RSF – Right Side Front
 RSC – Right Side Center
 RSR – Right Side Rear

- **Condition Codes**

 
1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 8 – Missing
 24 – Burned Out



MarkerLight-LED

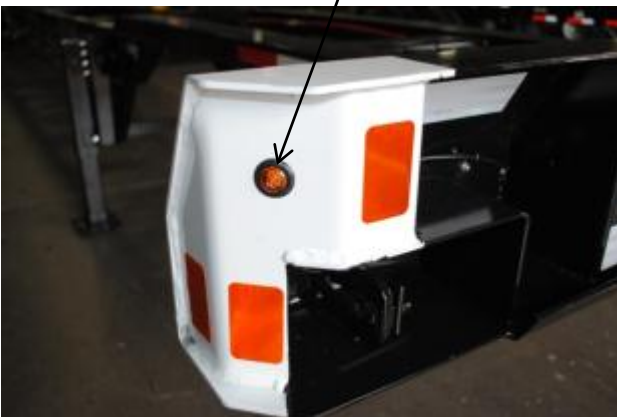

4148 LicensePlateLight-LED



- **Location Code**

R - Rear

LicensePlateLight-LED



- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4149 LicensePlateLightAssembly-BulbType



- **Location Code**

R - Rear

LicensePlateLightAssembly -BulbType



- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4150 LicensePlateLightAssembly-SealBeam



- **Location Code**

R - Rear

LicensePlateLightAssembly -SealBeam

- **Condition Codes**

1 - ReplaceW/New
A - Secure



- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4151 ConspicuityTape



- **Location Codes**

F – Front
R – Rear
LS - Left Side
RS - Right Side

ConspicuityTape

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
8 - Missing



4152 Reflector



Reflector



- **Location Codes**

F – Front
LR - Left Rear
RR - Right Rear
LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear
RSF - Right Side Front
RSC - Right Side Center
RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 - Missing

4153 LensRetainer/ORing



- **Location Codes**

F – Front
LR - Left Rear
RR - Right Rear
LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear
RSF - Right Side Front
RSC - Right Side Center
RSR - Right Side Rear

LensRetainer/ORing

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
8 - Missing



4156 ElectricalJunctionBox



ElectricalJunctionBox



- **Location Codes**

F - Front
U - Under

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
21 – Corrosion
24 – Burned Out

4157 TailLightAssembly-BulbType



TailLightAssembly-
BulbType



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4158 Stop/Tail/TurnLight-LED



- **Location Codes**

LR - Left Rear
RR - Right Rear

Stop/Tail/TurnLight-LED



- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
3 - Broken
7 - Loose
8 - Missing
24 - Burned Out

4161 TailLightAssembly-SealBeam



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Code**

1 - ReplaceW/New
A - Secure

TailLightAssembly-
SealBeam



- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – Burned Out

4162 MarkerLightMountingClip/Base



- **Location Codes**

F – Front
R – Rear
LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear
RSF - Right Side Front
RSC - Right Side Center
RSR - Right Side Rear

MarkerLightMounting
Clip/Base

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 - Missing



4163 MarkerLightBracket(Steel)



- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
18 - WeldBroken
21 - Corrosion

 
MarkerLightBracket(Steel)



4164 TailLightBracketGuard



TailLightBracketGuard

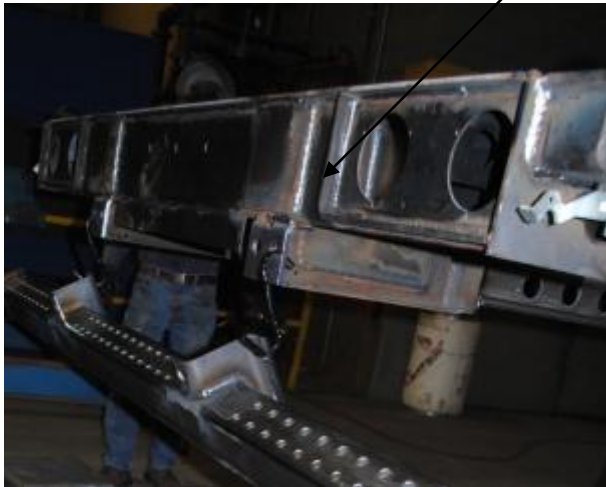

- **Location Codes**

LR - Left Rear
RR - Right Rear

 
- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
18 - WeldBroken
21 - Corrosion

4165 SealBeamGrommet

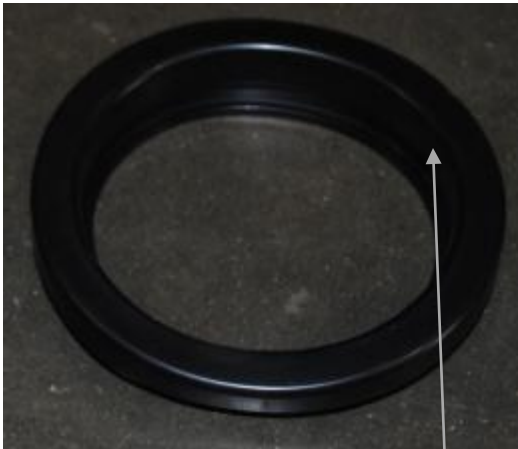

- **Location Codes**

F – Front
 R – Rear
 LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

SealBeamGrommet

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 8 – Missing
 14 - Cut,Torn
 15 – WornOut
 22 - Rotted



4166 CombinationStop/TurnAssembly



Combination Stop/Turn Assembly



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
24 – BurnedOut

4250 7-WayReceptacleBase



7-WayReceptacleBase



- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

 
1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 - Missing

4251 7-Way Receptacle

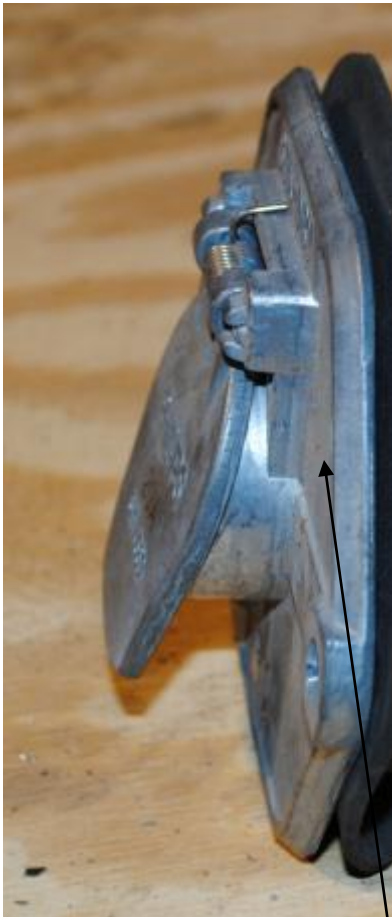

- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - Replace W/New

A - Secure

- **Why Made Codes**

1 – Associated With Repairs

3 – Broken

7 – Loose

8 – Missing

15 – Worn Out

21 – Corrosion

24 - Burned Out

7-Way Receptacle



4253 7-WayReceptaclewithBreaker



- **Location Codes**

F – Front
R – Rear

 
- **Condition Codes**

1 - ReplaceW/New
A - Secure

7-WayReceptaclewithBreaker

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
7 – Loose
8 – Missing
15 – WornOut
21 - Corrosion
24 - BurnedOut

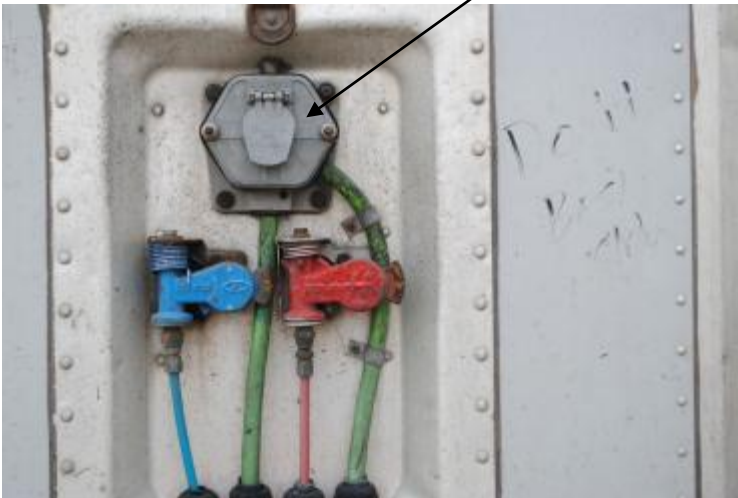

4254 Pigtail



Pigtail

- **Location Codes**

F – Front
 R – Rear
 LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 3 – Broken
 7 – Loose
 8 – Missing
 14 - Cut,Torn
 15 – WornOut
 21 – Corrosion
 24 - BurnedOut



4258 AdapterPlug-LED

- **Location Codes**

F – Front

R – Rear

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

AdapterPlug-LED

- **Condition Codes**

1 - ReplaceW/New

- **Why Made Codes**

32 – PerContract

4260 SatelliteTrackingUnit



SatelliteTrackingUnit



- **Location Code**

T - Top

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 - Missing

4261 SatelliteDoorSensor

- **Location Code**

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
A - Secure

 
- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 - Missing

SatelliteDoorSensor



4262 SatelliteLithiumBatteryPack

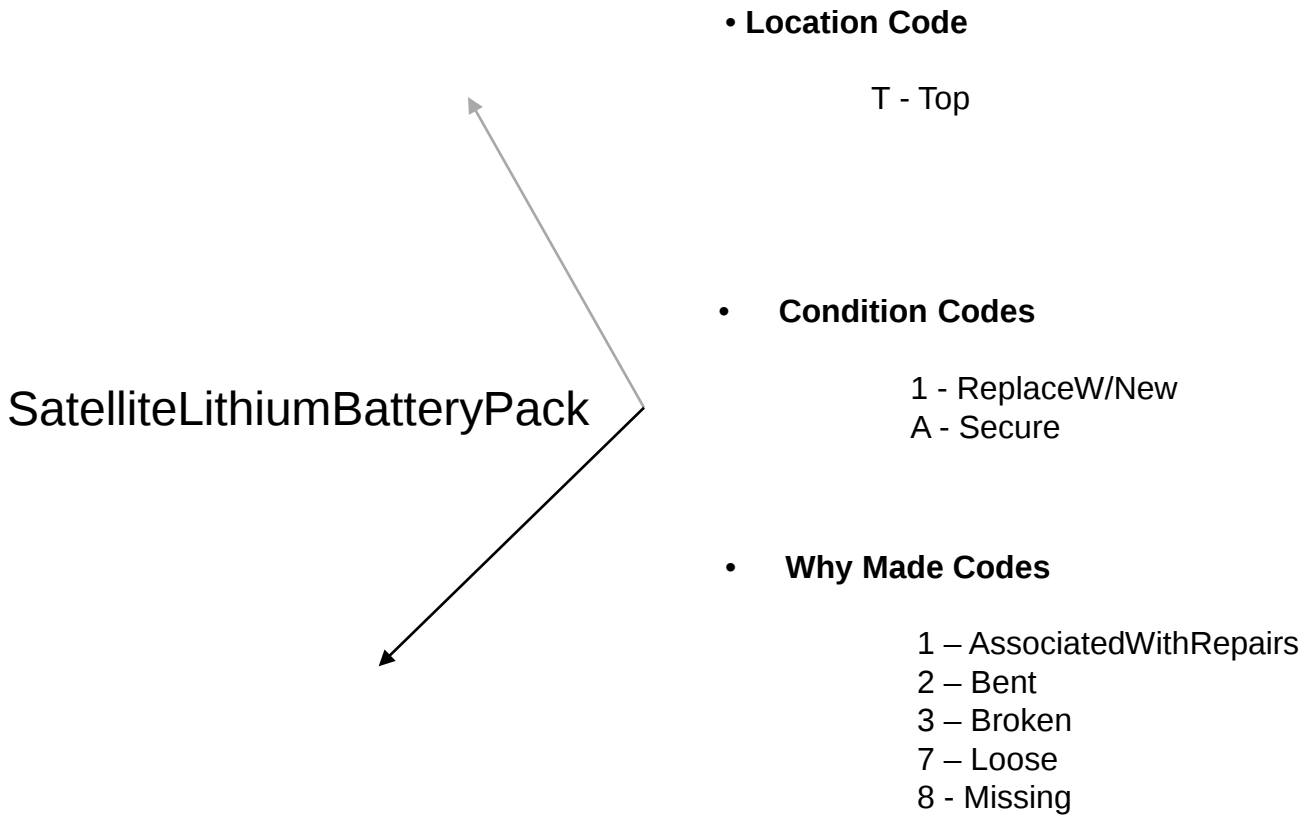

4263 SatelliteConnectingLines

SatelliteConnectingLines



- **Location Code**

T - Top

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

4305 InteriorLiningDivider

- **Location Codes**

F – Front

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

TF - Top Front

TC - Top Center

TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

 
2 – Bent

3 – Broken

7 – Loose

8 - Missing

InteriorLiningDivider

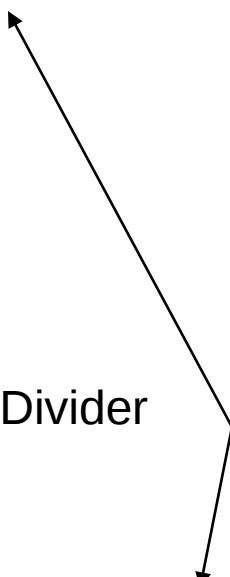

4310 InteriorPlasticLiner



- **Location Codes**

F – Front

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

TF - Top Front

TC - Top Center

TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New

A – Secure

B – Patch

C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

14 - Cut,Torn

InteriorPlasticLiner



4312 InteriorPlywoodLining



- **Location Codes**

F – Front

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

TF - Top Front

TC - Top Center

TR - Top Rear

InteriorPlywoodLining



- **Condition Codes**

1 - ReplaceW/New

A – Secure

C – Section

- **Why Made Codes**

1 –AssociatedWithRepairs

3 – Broken

7 – Loose

8 – Missing

14 - Cut,Torn

36 - Contaminant

4320 SidewallLoadRetainer(Etrack)

- **Location Codes**

 
LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 A - Secure
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 8 - Missing
 14 - Cut,Torn
 18 - WeldBroken

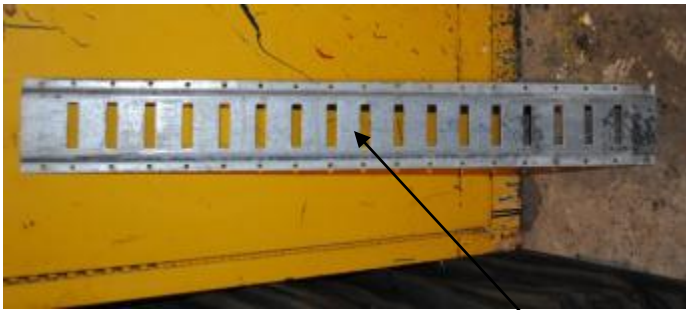

SidewallLoadRetainer
(Etrack)



4334 Scuffliner, Plastic

- **Location Codes**

 
LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear
RSF - Right Side Front
RSC - Right Side Center
RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure
C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs
3 - Broken
7 - Loose
8 - Missing
14 - Cut, Torn
20 - CorrectImproperRepair

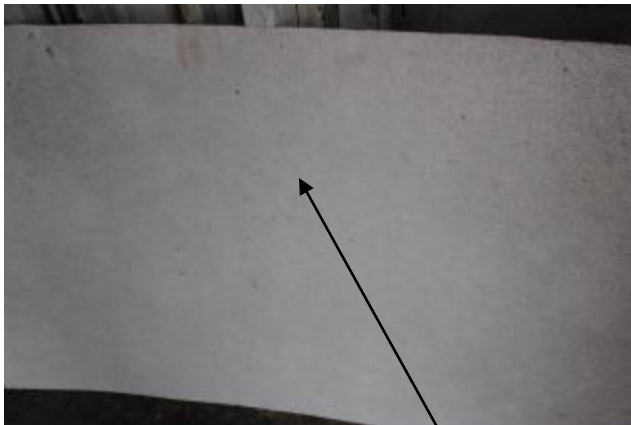

Scuffliner, Plastic

4338 Scuffliner,Wood

- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear



Scuffliner, Wood

- **Condition Codes**

1 - ReplaceW/New
 A - Secure
 C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs
 3 - Broken
 7 - Loose
 8 - Missing
 14 - Cut,Torn
 20 - CorrectImproperRepair
 36 - Contaminant



4342 Scuffliner,Metal

- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 8 – Straighten
 A – Secure
 C – Section

- **Why Made Codes**

 
1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 14 - Cut,Torn
 20 - CorrectImproperRepair



Scuffliner,Metal



4408 DoorBumper(Stop)

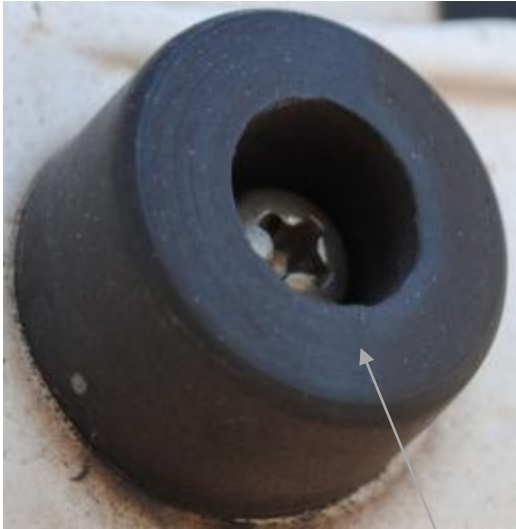

DoorBumper(Stop)



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

7 – Loose

8 - Missing

4409 Anti-TheftPlate



Anti-TheftPlate



- **Location Code**

LR - Left Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing

4410 HingePinBushing

- **Location Codes**

LR - Left Rear

RR - Right Rear

 
- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

3 – Broken


8 - Missing

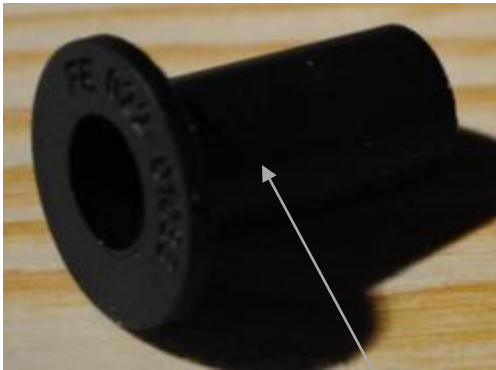

HingePinBushing



 4411 LockRodGuideBushing

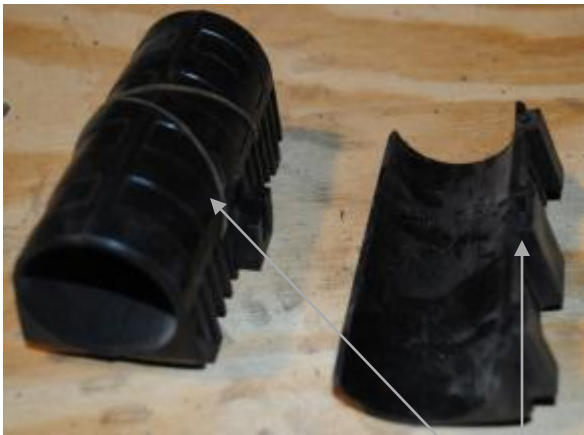

LockRodGuideBushing

- **Location Codes**

LR - Left Rear

RR - Right Rear

 
- **Condition Code**

1 - ReplaceW/New


- **Why Made Codes**

3 – Broken

8 - Missing

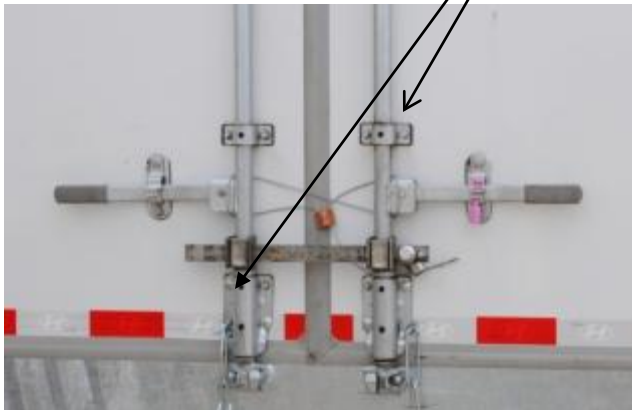

4412 DoorHandleMountBracket

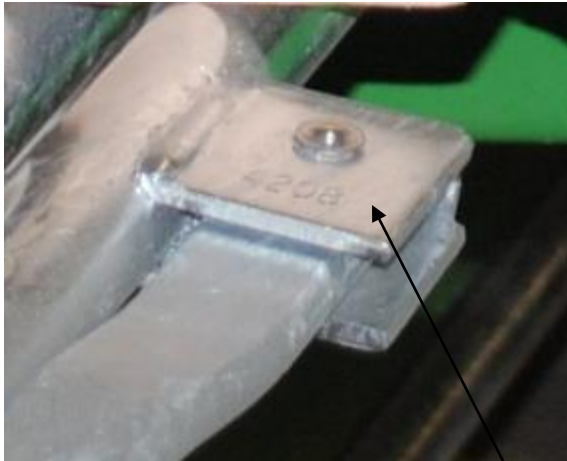 

DoorHandleMountBracket



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

20 - CorrectImproperRepair

21 - Corrosion

4413 HingeButt



HingeButt



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
3 – Broken

8 – Missing

18 – WeldBroken

20 - CorrectImproperRepair

4415 LockrodCam

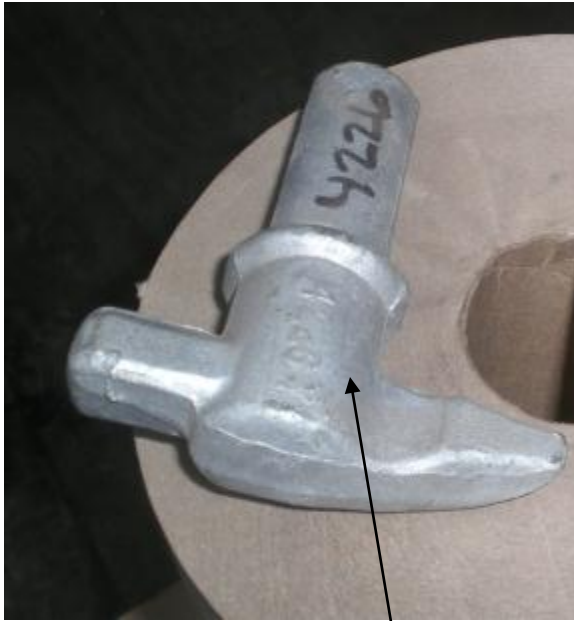

LockrodCam



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

8 - Missing

18 - WeldBroken

20 - CorrectImproperRepair

4417 DoorHinge,Steel



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

DoorHinge,Steel

- **Why Made Codes**

2 - Bent

3 - Broken

8 - Missing

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion



4418 Door,Rear,Steel



Door,Rear,Steel



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

H - Overlay

I - Insert

- **Why Made Codes**

2 - Bent

3 - Broken

8 - Missing

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

4419 Door

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

0 – Temporary Repair

1 - Replace W/New

8 – Straighten

B – Patch

- **Why Made Codes**

2 – Bent

3 – Broken

8 – Missing

14 - Cut, Torn

20 – Correct Improper Repair

22 - Rotted



Door



4420 Door,Rollup

- **Location Code**

R - Rear

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

B – Patch

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
3 – Broken

8 – Missing

14 - Cut,Torn

20 – CorrectImproperRepair

22 - Rotted

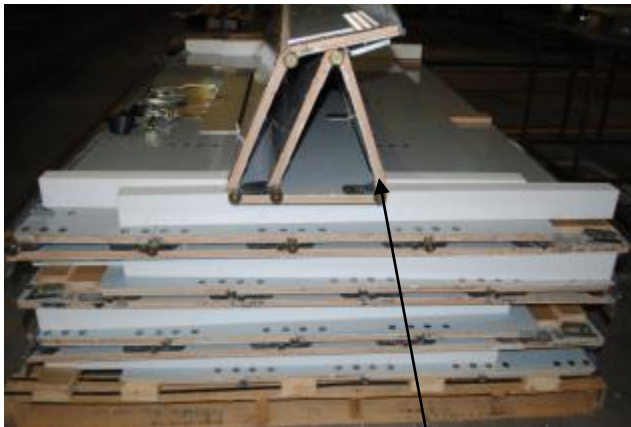

Door,Rollup



4422 Door,Side

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

B – Patch

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

 
8 – Missing

14 - Cut, Torn

20 – CorrectImproperRepair

22 - Rotted

Door,Side

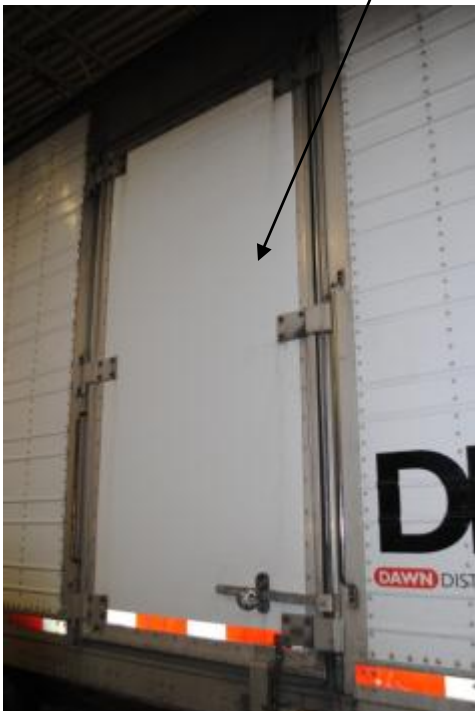

4423 DoorPlyliner



DoorPlyliner



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs

3 - Broken

7 - Loose

8 - Missing

14 - Cut, Torn

36 - Contaminant

4425 DoorGasket



DoorGasket



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

3 - Broken

7 - Loose

8 - Missing

14 - Cut,Torn

15 - WornOut

20 - CorrectImproperRepair

4426 InnerDoorSeals



InnerDoorSeals



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
A - Secure
C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs
3 - Broken
7 - Loose
8 - Missing
14 - Cut,Torn
15 - WornOut

4427 DoorMoldingAluminum

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

C - Section

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut, Torn

18 - WeldBroken

23 - FlexCracks



DoorMoldingAluminum



4428 LockRodGuideAssembly



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

20 - CorrectImproperRepair

LockRodGuideAssembly



4430 DoorHandle

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

 
3 - Broken

8 - Missing

20 - CorrectImproperRepair



DoorHandle

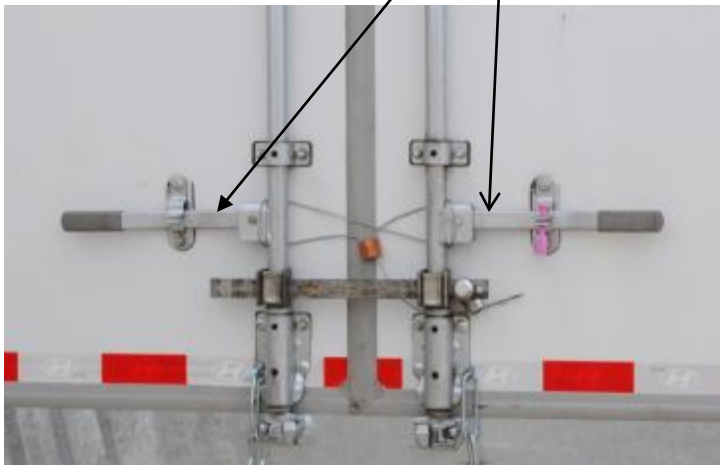

4431 DoorHoldBack



DoorHoldBack



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

 
18 - WeldBroken

20 - CorrectImproperRepair

4432 DoorHinge



DoorHinge

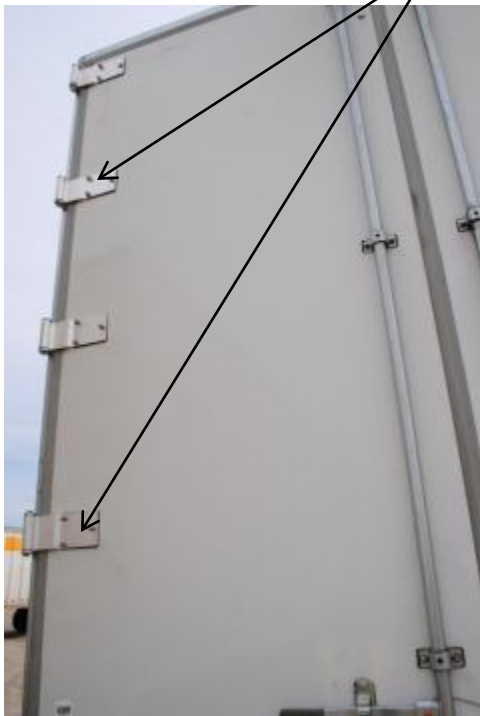

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

8 - Missing

 
 
20 - CorrectImproperRepair

21 - Corrosion

4433 DoorHoldBackClip/Hook



DoorHoldBackClip/Hook

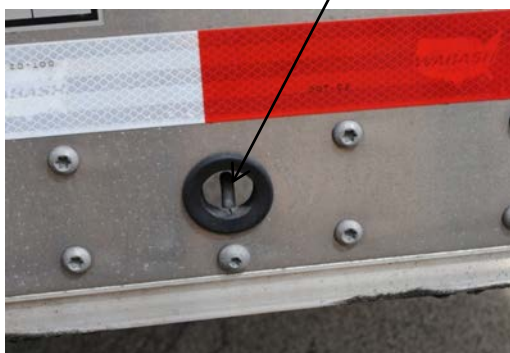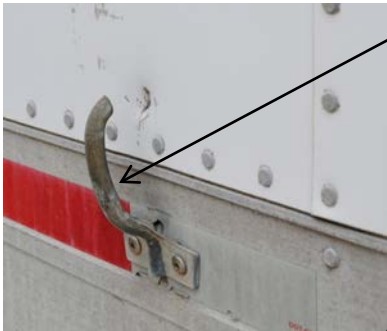

- Location Codes**

LR - Left Rear

RR - Right Rear

- Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

4434 DoorHoldBackBracket

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

18 - WeldBroken



DoorHoldBackBracket



4437 DoorCamKeeper

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

 
3 - Broken

18 - WeldBroken

20 - CorrectImproperRepair



DoorCamKeeper

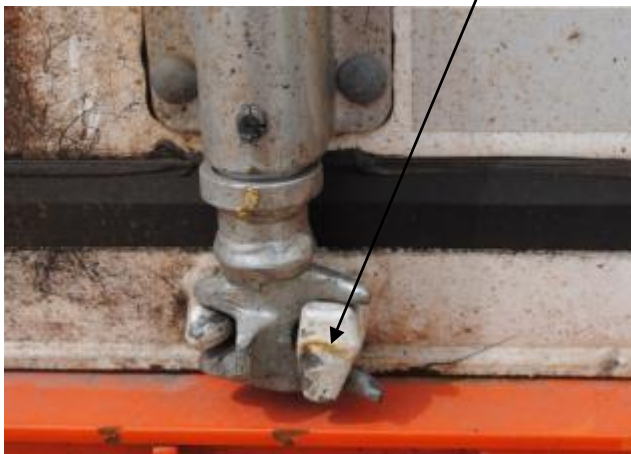

4439 DoorHandleKeeper



DoorHandleKeeper



- **Location Codes**

LR - Left Rear
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
20 - CorrectImproperRepair

4441 DoorLockrod



DoorLockrod



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

- **Why Made Codes**

2 - Bent

3 - Broken

8 - Missing

20 - CorrectImproperRepair

21 - Corrosion

4444 DoorHingePin

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

 
3 - Broken

7 - Loose

8 - Missing

20 - CorrectImproperRepair

DoorHingePin

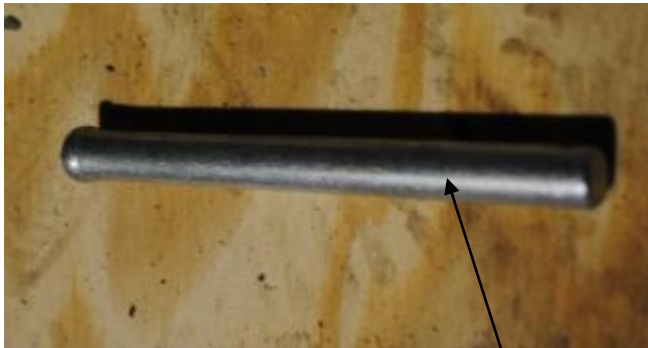


4448 DoorVent

- **Location Codes**

LR - Left Rear

 RR - Right Rear

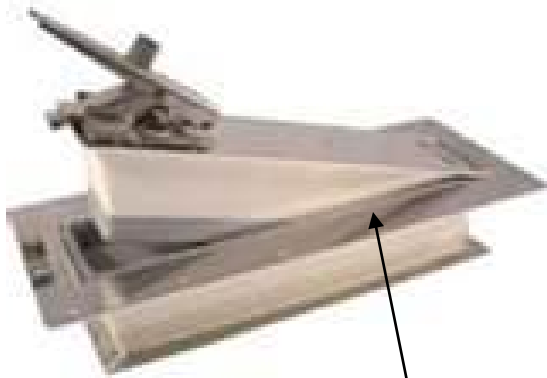

DoorVent

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

 
1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

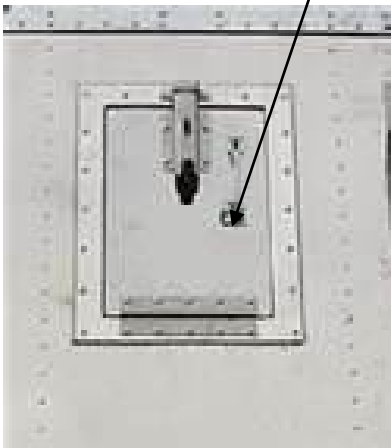

4455 DoorSensor

- **Location Codes**

C - Complete

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

DoorSensor

4456 DoorSensorBracket

- **Location Codes**

C - Complete

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

DoorSensorBracket

4458 DoorHeader



DoorHeader



- **Location Code**

R - Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

4459 RainGutter



RainGutter



- **Location Code**

R - Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
18 - WeldBroken

4464 RearDoorSill

- **Location Code**

R - Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

23 - FlexCracks



RearDoorSill



4520 RoofBow



RoofBow



- **Location Codes**

TF - Top Front
TC - Top Center
TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
14 - Cut,Torn
20 - CorrectImproperRepair

4521 - RoofBow,Steel

- **Location Codes**

 
TF - Top Front
TC - Top Center
TR - Top Rear

- **Condition Codes**


1 - ReplaceW/New
8 – Straighten
A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut,Torn
20 - CorrectImproperRepair

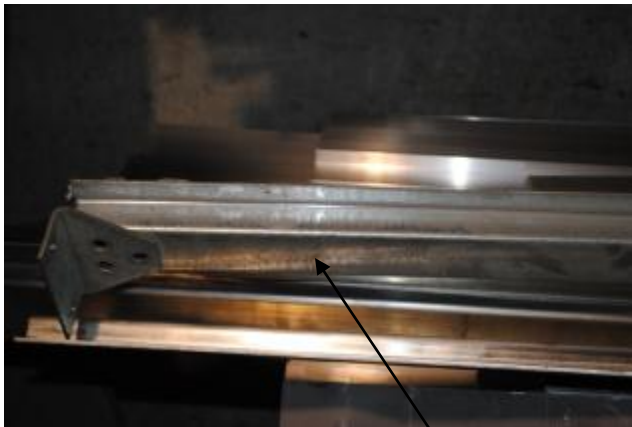

RoofBow,Steel

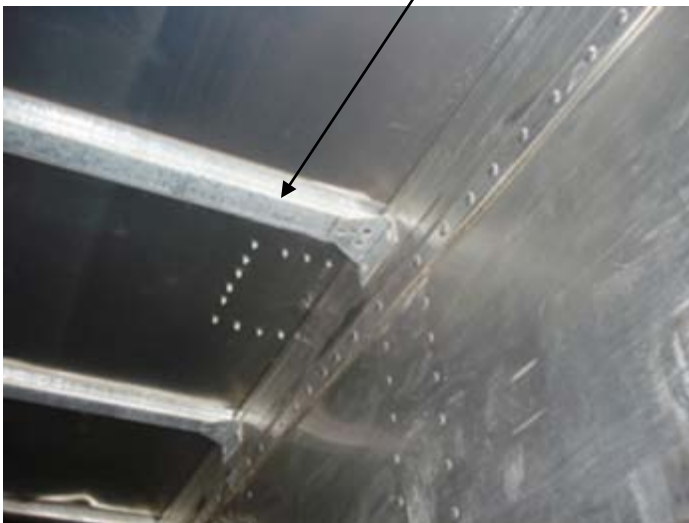 

4535 TarpBow



TarpBow



- **Location Codes**

TF - Top Front
TC - Top Center
TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten

 
- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
8 - Missing

4551 RoofSheet-Aluminum



RoofSheet-Aluminum

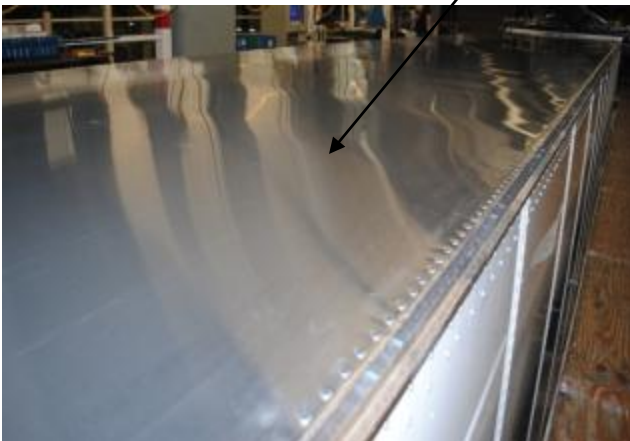

- **Location Codes**

TF - Top Front
TC - Top Center
TR - Top Rear

 
- **Condition Codes**

0 – TemporaryRepair
1 - ReplaceW/New
8 – Straighten
9 – Seal
A – Secure
E - Patch, Buck Rivets
F - Patch,SSPopRivets
G - Section,BuckRivets

- **Why Made Codes**

2 – Bent
6 - Leaking
7 – Loose
14 - Cut,Torn
20 – CorrectImproperRepair
23 - FlexCracks

4553 Roof,SteelRoofPanel

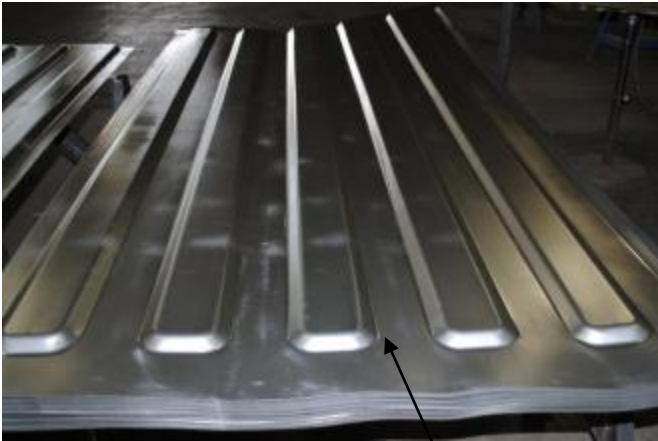

Roof,SteelRoofPanel



- **Location Codes**

TC - Top Center

TF - Top Front

TR - Top Rear

- **Condition Codes**

0 - TemporaryRepair

1 - ReplaceW/New

8 - Straighten

D - Weld

H - Overlay

I - Insert

- **Why Made Codes**

2 - Bent

3 - Broken

14 - Cut,Torn - Cut

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

23 - FlexCracks

4586 Tarp,Permanent

- Location Codes**

T - Top



- Condition Codes**

1 - ReplaceW/New

A - Secure

B - Patch

- Why Made Codes**

1 - AssociatedWithRepairs

7 - Loose

8 - Missing

14 - Cut,Torn

22 - Rotted

Tarp,Permanent



4612 SideVent

- **Location Codes**

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New

A - Secure

 
- **Why Made Codes**

1 - AssociatedWithRepairs

3 - Broken

7 - Loose

8 - Missing

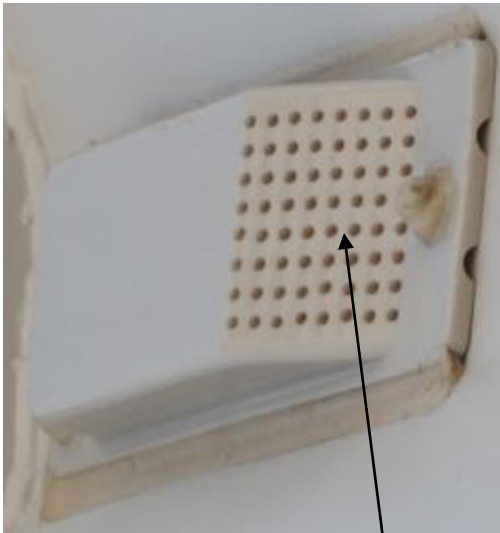

SideVent



4613 SidePanel

- **Location Codes**

 
LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**


0 – TemporaryRepair
 1 - ReplaceW/New
 8 – Straighten
 9 – Seal
 A – Secure
 E - Patch, Buck Rivets
 F - Patch,SSPopRivets
 G - Section,BuckRivets

- **Why Made Codes**


2 – Bent
 6 - Leaking
 7 – Loose
 14 - Cut,Torn
 20 – CorrectImproperRepair
 23 - FlexCracks

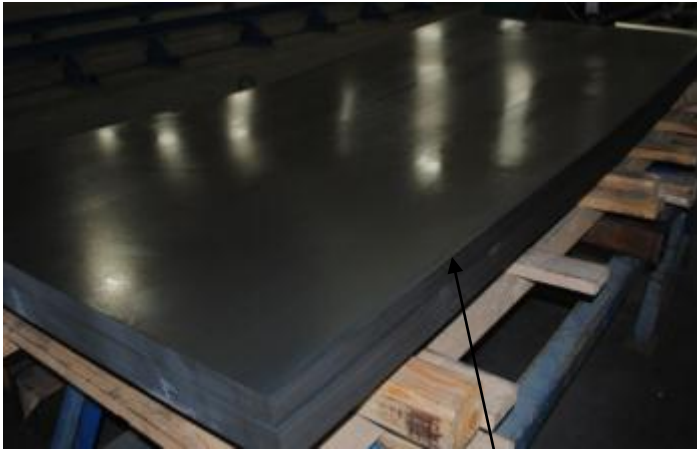

SidePanel

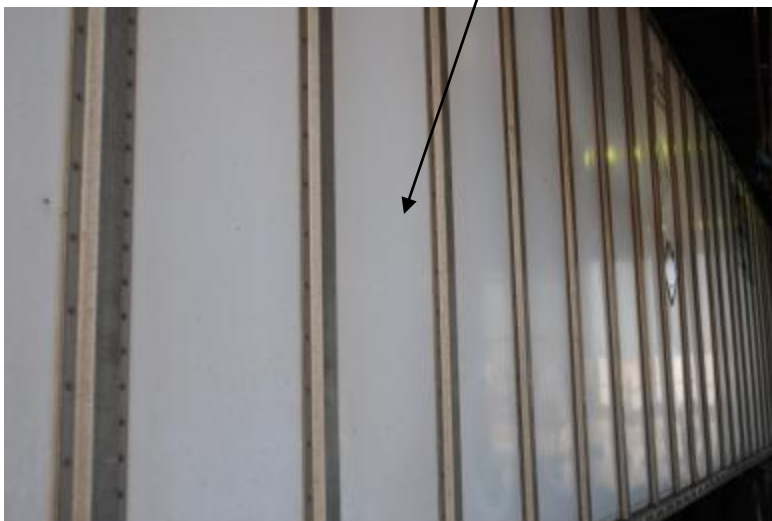 

4616 SidePanel, Galvanized Steel

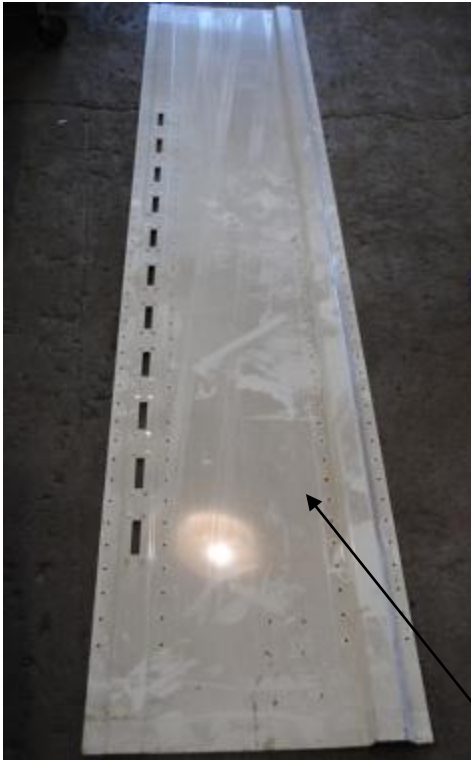 

- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

0 – Temporary Repair
 1 - Replace W/New
 8 – Straighten
 A – Secure
 B – Patch
 H – Overlay
 I – Insert

 
SidePanel, Galvanized Steel



- **Why Made Codes**

2 – Bent
 3 – Broken
 7 – Loose
 14 - Cut, Torn
 20 - Correct Improper Repair

4618 SidePanel,Steel

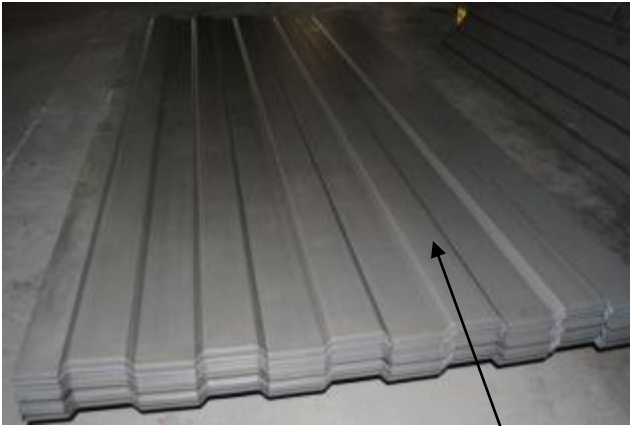

SidePanel,Steel



- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

0 – TemporaryRepair
 1 - ReplaceW/New
 8 – Straighten
 D – Weld
 H – Overlay
 I – Insert

 
- **Why Made Codes**

2 – Bent
 3 – Broken
 14 - Cut,Torn
 18 – WeldBroken
 20 – CorrectImproperRepair
 21 – Corrosion
 23 - FlexCracks

4621 StarterPost



StarterPost

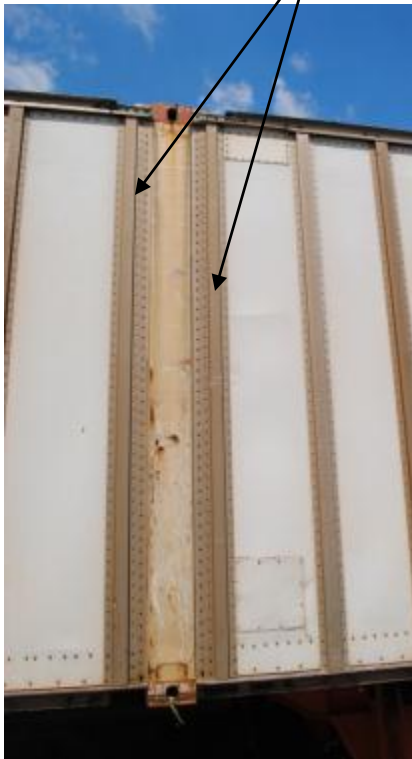

- **Location Codes**

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut, Torn

20 - CorrectImproperRepair

4622 SidePost



SidePost



- **Location Codes**

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

A – Secure

H – Overlay

- **Why Made Codes**

2 – Bent

3 – Broken

8 – Missing

14 - Cut,Torn

20 - CorrectImproperRepair

4629 DoorPost

- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

C - Section

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

23 - FlexCracks



DoorPost



4630 JBar



JBar



- **Location Codes**

LR - Left Rear

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

C - Section

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

4704 ManifestBox



ManifestBox



- **Location Codes**

F – Front

R – Rear

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut,Torn

15 - WornOut

4706 RecessedPanel(Gladhand)



- **Location Code**

F - Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

9 - Seal

A - Secure

- **Why Made Codes**

2 - Bent

3 - Broken

6 - Leaking

7 - Loose

 
14 - Cut,Torn

20 - CorrectImproperRepair

RecessedPanel(Gladhand)



4707 RecessedPanel(Manifest)

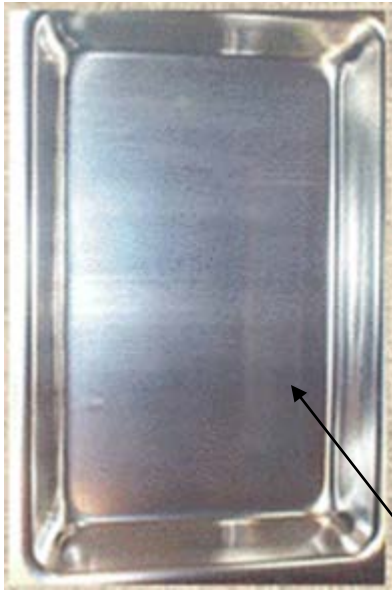

RecessedPanel(Manifest)



- **Location Code**

F - Front

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 9 - Seal
 A - Secure

- **Why Made Codes**

2 - Bent
 3 - Broken
 6 - Leaking
 7 - Loose
 14 - Cut,Torn
 20 - CorrectImproperRepair

4718 CornerCap

- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

9 – Seal

A – Secure

D – Weld

- **Why Made Codes**

2 – Bent

3 – Broken

6 - Leaking

7 – Loose

 
8 – Missing

14 - Cut,Torn

18 – WeldBroken

20 – CorrectImproperRepair

23 - FlexCracks

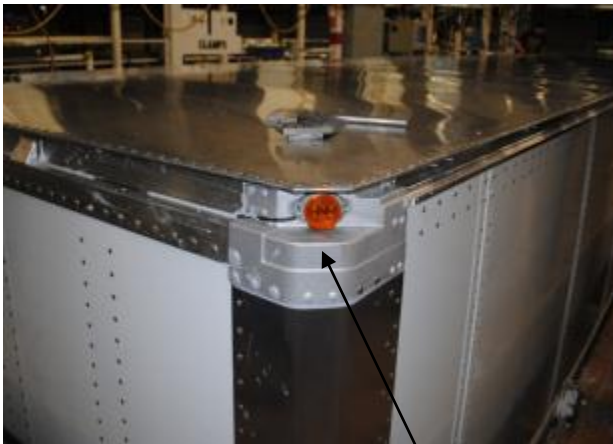

CornerCap



4724 Registration/PermitHolder



- **Location Codes**

F – Front
 R – Rear
 LS - Left Side
 RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
 A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 14 - Cut,Torn
 15 - WornOut

Registration/PermitHolder



4730 NosePanel

- **Location Code**

 
F - Front

- **Condition Codes**

0 – TemporaryRepair
 1 - ReplaceW/New
 8 – Straighten
 9 – Seal
 A – Secure
 E - Patch, Buck Rivets
 F - Patch,SSPopRivets
 G - Section,BuckRivets

- **Why Made Codes**


2 – Bent
 6 - Leaking
 7 – Loose
 14 - Cut,Torn
 20 – CorrectImproperRepair
 23 - FlexCracks

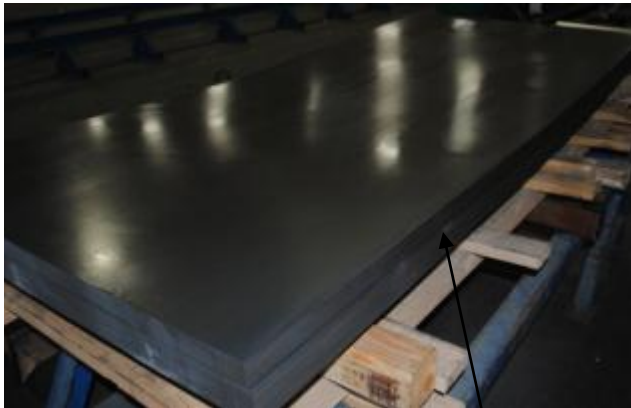

NosePanel



 4733 NosePanel, Galvanized Steel

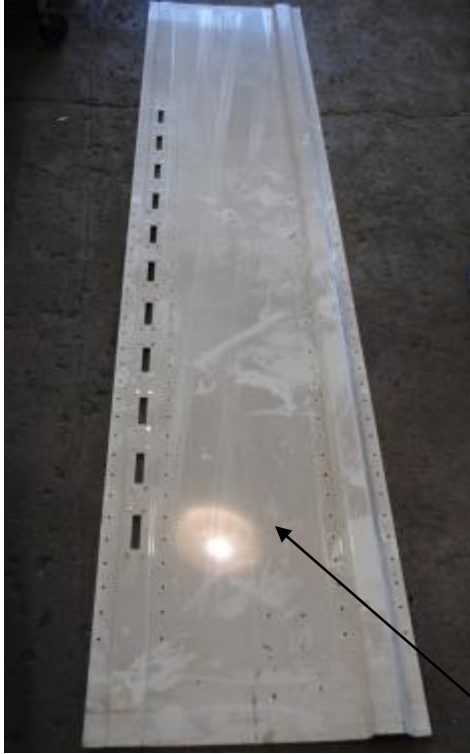

NosePanel, Galvanized Steel



- **Location Code**

F - Front

- **Condition Codes**

0 – Temporary Repair
 1 - Replace W/New
 8 – Straighten
 9 – Seal
 A – Secure
 B – Patch
 E – Patch, Buck Rivets
 G – Section, Buck Rivets
 H – Overlay
 I – Insert

- **Why Made Codes**

2 – Bent
 3 – Broken
 6 - Leaking
 7 – Loose
 14 - Cut, Torn
 20 – Correct Improper Repair
 23 - Flex Cracks

4734 NosePanel,Steel

- Location Code**

F - Front

- Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

D – Weld

H – Overlay

I - Insert

- Why Made Codes**

2 – Bent

3 – Broken

 
14 - Cut,Torn

18 – WeldBroken

20 – CorrectImproperRepair

21 – Corrosion

23 - FlexCracks

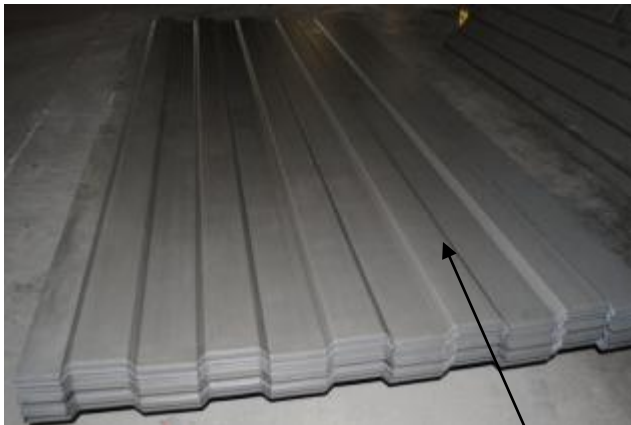

NosePanel,Steel



4736 RadiusPanel

- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

9 – Seal

A – Secure

F - Patch,SSPopRivets

G - Section,BuckRivets

- **Why Made Codes**

2 – Bent

6 - Leaking

7 – Loose

 
14 - Cut,Torn

20 – CorrectImproperRepair

23 - FlexCracks



RadiusPanel

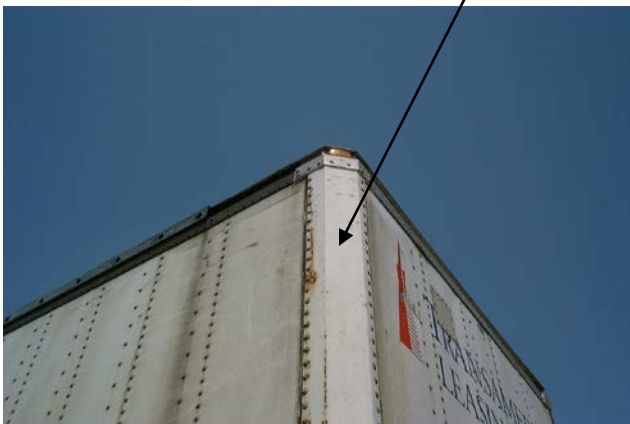

4742 Bulkhead

- **Location Code**

F - Front

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

9 – Seal

B – Patch

C – Section

D – Weld

- **Why Made Codes**

2 – Bent

 
3 – Broken

6 - Leaking

14 - Cut,Torn

18 – WeldBroken

23 - FlexCracks

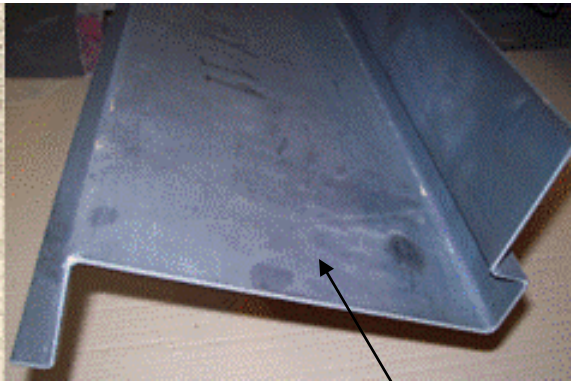

Bulkhead

 


4748 CornerPost

- Location Codes**

LF - Left Front

RF - Right Front

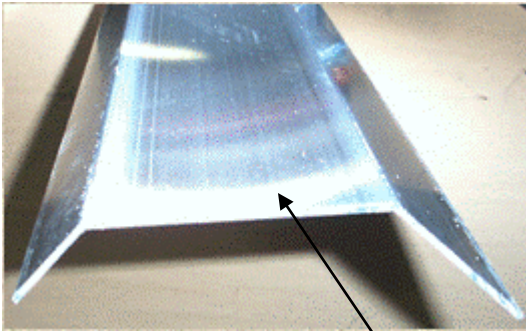

CornerPost

- Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

A – Secure

B – Patch

C – Section

D – Weld

- Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

14 - Cut,Torn

 
18 – WeldBroken

20 – CorrectImproperRepair

23 - FlexCracks



4750 CornerPost,Steel

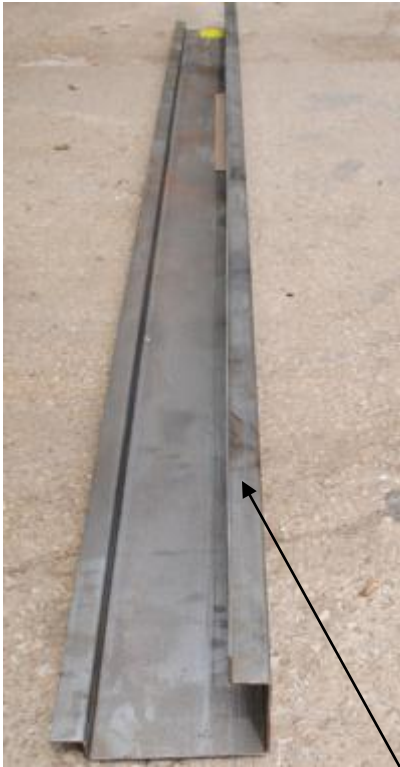

CornerPost,Steel



- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

B - Patch

C - Section

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

23 - FlexCracks

4752 NosePost(alum)



NosePost(alum)

- **Location Code**

F - Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

H - Overlay

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

14 - Cut, Torn

 
20 - CorrectImproperRepair



4753 NosePost, Galvanized Steel

- **Location Code**

F - Front

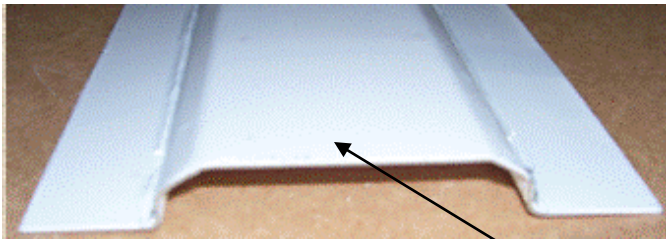

NosePost, Galvanized Steel

- **Condition Codes**

1 - ReplaceW/New

H – Overlay

I – Insert

- **Why Made Codes**

2 – Bent

3 – Broken

14 - Cut, Torn

20 - CorrectImproperRepair



4762 NoseRail,Straight

- **Location Code**

F - Front

- **Condition Codes**

0 – TemporaryRepair

1 - ReplaceW/New

8 – Straighten

9 – Seal

A – Secure

D – Weld

- **Why Made Codes**

2 – Bent

 
3 – Broken

6 - Leaking

7 – Loose

14 - Cut,Torn

20 - CorrectImproperRepair

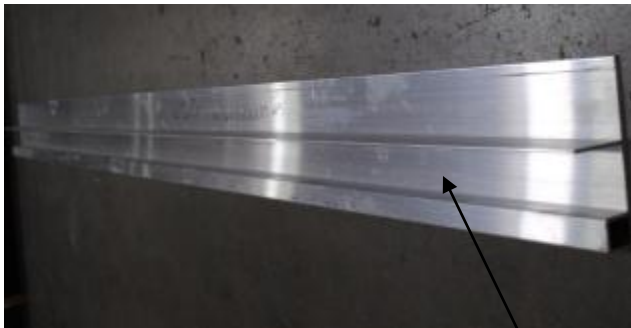


NoseRail,Straight



4763 NoseRail,WrapAround

- **Location Code**

 F - Front

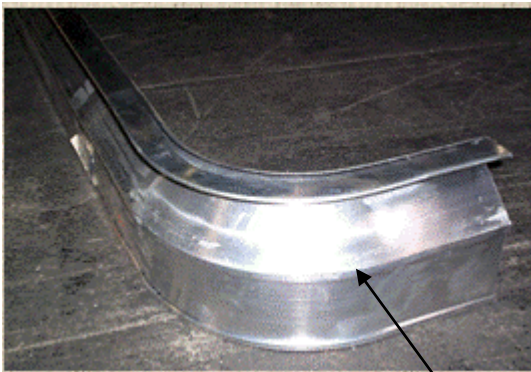

NoseRail,WrapAround

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 9 - Seal
 A - Secure
 D - Weld

- **Why Made Codes**

2 - Bent
 3 - Broken
 6 - Leaking
 7 - Loose
 14 - Cut,Torn
 20 - CorrectImproperRepair



4764 NoseRail,Steel



NoseRail,Steel



- **Location Code**

F - Front

- **Condition Codes**

0 – TemporaryRepair
1 - ReplaceW/New
8 – Straighten
9 – Seal
A – Secure
D – Weld

- **Why Made Codes**

2 – Bent
3 – Broken
6 - Leaking
7 – Loose
14 - Cut,Torn
20 - CorrectImproperRepair

4768 NosePostLiner(Metal)



NosePostLiner(Metal)

- **Location Code**

F - Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

 
1 - AssociatedWithRepairs

2 - Bent


3 - Broken

7 - Loose

20 - CorrectImproperRepair

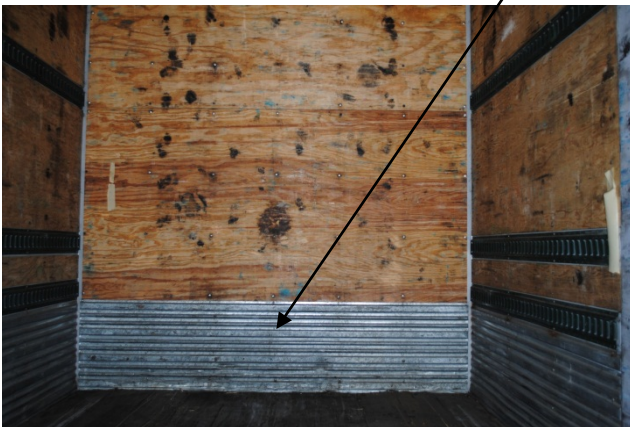

4769 RadiusLiner

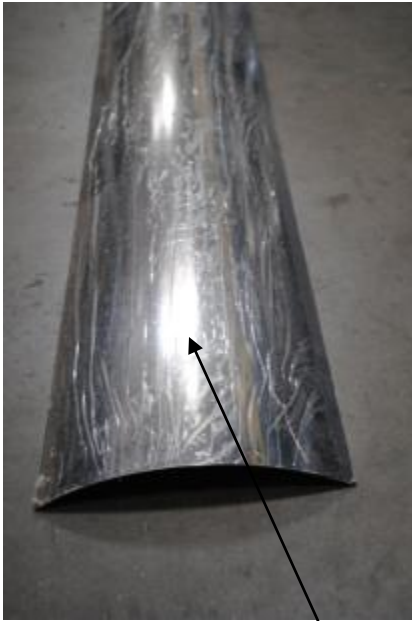 

RadiusLiner



- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

14 - Cut, Torn

20 - CorrectImproperRepair

4805 FloorChannel

- **Location Code**

I - Interior

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

C – Section

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut,Torn

15 - WornOut

FloorChannel



4811 Flooring

- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF- Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear
 I - Interior



 
Flooring

- **Condition Codes**


1 - ReplaceW/New
 A - Secure
 B - Patch
 C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 8 - Missing
 14 - Cut,Torn
 20 - CorrectImproperRepair
 23 - FlexCracks
 36 - Contaminant

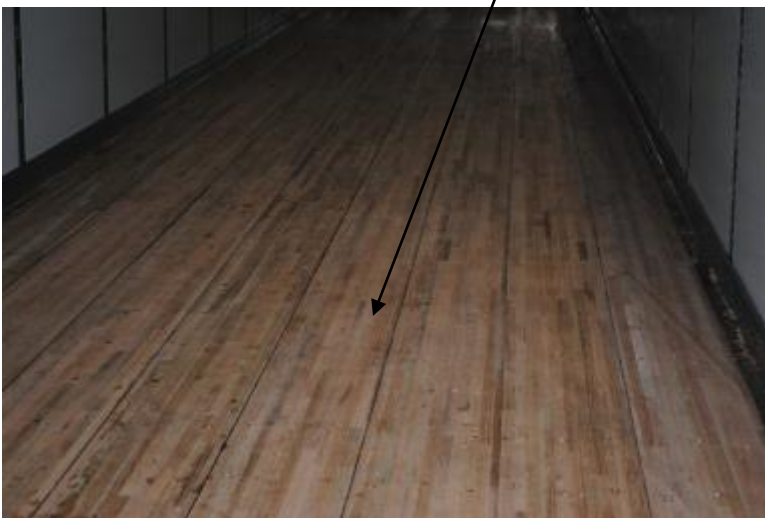

4846 ThresholdPlate

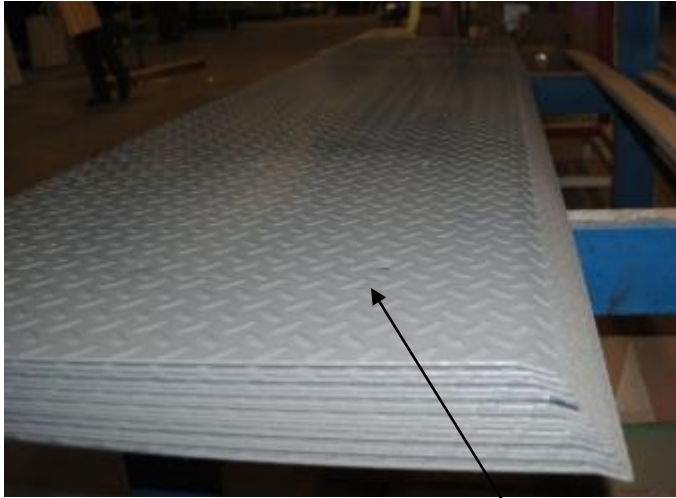 

ThresholdPlate



- **Location Code**

R - Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 A - Secure
 C - Section
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 8 - Missing
 14 - Cut, Torn
 18 - WeldBroken
 23 - FlexCracks

4852 FloorLoadRetainer

Not Applicable

- **Location Code**

I - Interior

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing

4854 FloorTieDownRing

- **Location Code**

I - Interior

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing



FloorTieDownRing



4907 FrontSill,Steel

- **Location Code**

 
F - Front

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure
C - Section

- **Why Made Codes**

2 - Bent
3 - Broken
7 - Loose
8 - Missing
14 - Cut,Torn

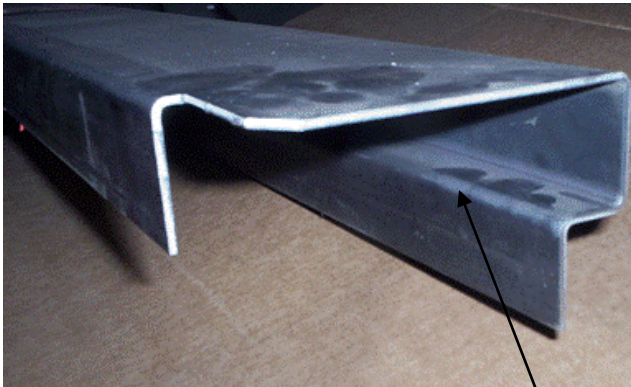

FrontSill,Steel



4908 FrontSill

- Location Code**

F - Front

- Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

C - Section

- Why Made Codes**

 
2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut,Torn

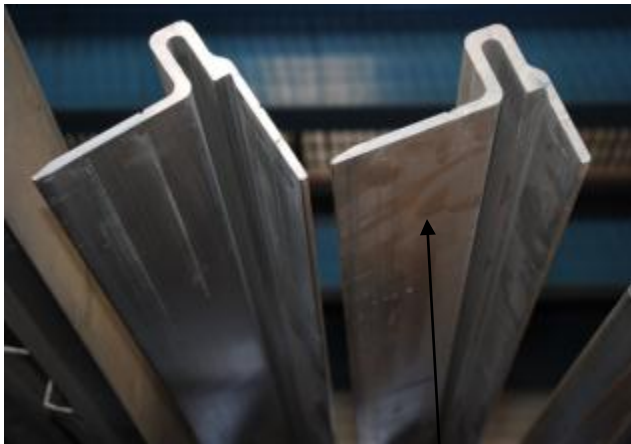


FrontSill



4909 ClosureRail(lowernoserail)

- Location Code**

 F - Front

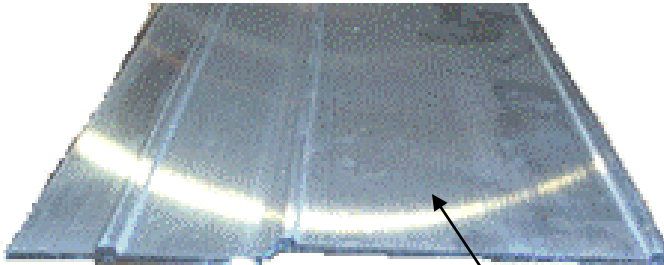

- Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

C - Section

ClosureRail(lowernoserail)

- Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut, Torn

20 - CorrectImproperRepair



4910 TopRail



TopRail



- **Location Codes**

LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear
RSF - Right Side Front
RSC - Right Side Center
RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
8 – Straighten
A – Secure
C – Section

- **Why Made Codes**

2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut,Torn
20 – CorrectImproperRepair
23 - FlexCracks

4911 TopRail,Steel



TopRail,Steel



- **Location Codes**

LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear
RSF - Right Side Front
RSC - Right Side Center
RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
C - Section
D - Weld

- **Why Made Codes**

2 - Bent
3 - Broken
14 - Cut,Torn
18 - WeldBroken
20 - CorrectImproperRepair
21 - Corrosion

4918 TopRailProtector

- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 A - Secure
 C - Section

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 8 - Missing
 14 - Cut,Torn
 20 - CorrectImproperRepair

TopRailProtector



4960 BottomRail



BottomRail



- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 C - Section
 H - Overlay

- **Why Made Codes**

2 - Bent
 3 - Broken
 8 - Missing
 14 - Cut, Torn
 20 - CorrectImproperRepair
 21 - Corrosion
 23 - FlexCracks

4961 BottomRail,Steel

- **Location Codes**

LSF - Left Side Front

 
LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

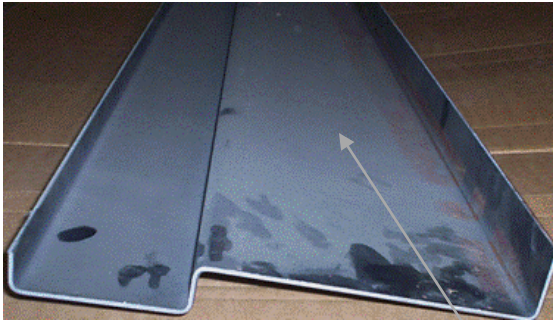

BottomRail,Steel

- **Condition Codes**

1 - ReplaceW/New

C – Section

D – Weld

H – Overlay

I – Insert

- **Why Made Code**

2 – Bent

3 – Broken

14 - Cut,Torn

 
18 – WeldBroken

20 – CorrectImproperRepair

21 - Corrosion



4970 LiftPad

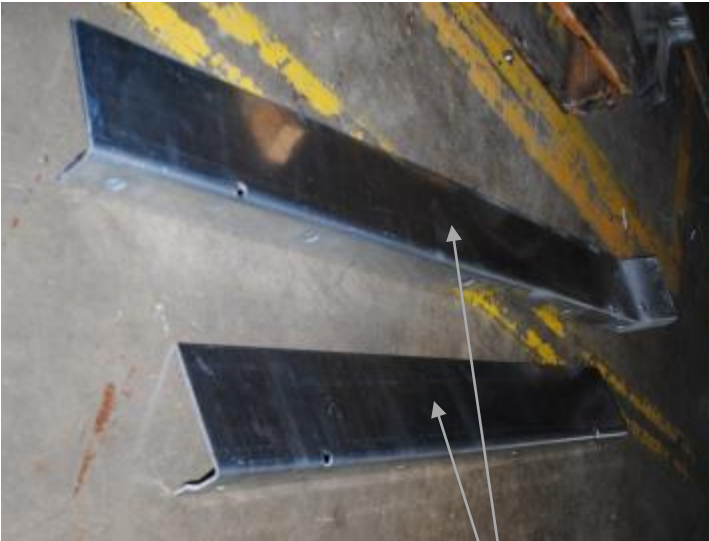

LiftPad



- Location Codes**

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

4980 SideSkirt

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut, Torn

20 - CorrectImproperRepair



SideSkirt



4981 SideSkirtBracket



- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 - Cut, Torn

20 - CorrectImproperRepair

SideSkirtBracket

 


5001 ChassisBolster

R



F

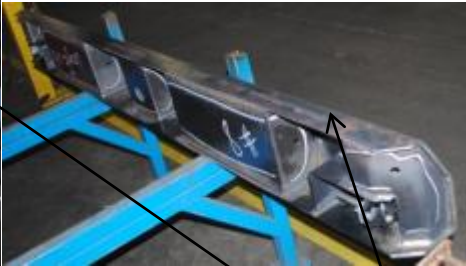

ChassisBolster

F



R



- Location Codes**

LF - Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear

- Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 C - Section
 D - Weld

- Why Made Codes**

2 - Bent
 3 - Broken
 14 - Cut,Torn
 18 - WeldBroken
 20 - CorrectImproperRepair
 21 - Corrosion
 23 - FlexCracks

5002 BolsterGusset



BolsterGusset



- **Location Codes**

LF - Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 8 - Missing
 14 - Cut,Torn
 18 - WeldBroken
 20 - CorrectImproperRepair
 23 - FlexCracks

5003 BolsterHorn(FrontGuide)



BolsterHorn(FrontGuide)

- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

8 - Missing

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair



5010 TwistLock/PushPin



- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A – Secure

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

18 – WeldBroken

20 - CorrectImproperRepair

TwistLock/PushPin



5011 TwistLockHandle

- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear



TwistLockHandle

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

18 - WeldBroken

20 - CorrectImproperRepair



5012 TwistLockHandleKeeper



TwistLockHandleKeeper



- **Location Codes**

LF - Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 A - Secure

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 8 - Missing
 20 - CorrectImproperRepair

5013 TwistLockAssembly



TwistLockAssembly



- **Location Codes**

LF - Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 8 - Missing
 15 - WornOut
 18 - WeldBroken
 20 - CorrectImproperRepair
 21 - Corrosion

5014 TwistLockHandleKeeperBracket



TwistLockHandleKeeper
Bracket



- **Location Codes**

LF - Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
8 - Missing
18 - WeldBroken
20 - CorrectImproperRepair

5020 MainFrameRail



MainFrameRail



- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten
 C - Section
 D - Weld

- **Why Made Codes**

2 - Bent
 3 - Broken
 14 - Cut,Torn
 18 - WeldBroken
 20 - CorrectImproperRepair
 21 - Corrosion
 23 - FlexCracks

5030 ChassisCrossmember



ChassisCrossmember



- **Location Codes**

U – Under

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

D – Weld

- **Why Made Codes**

2 – Bent

3 – Broken

8 – Missing

18 – WeldBroken

20 – CorrectImproperRepair

21 – Corrosion

23 - FlexCracks

5031 ChassisCrossmemberGusset



ChassisCrossmemberGusset



- **Location Codes**

U – Under
 LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

 
- **Condition Codes**

1 - ReplaceW/New
 8 – Straighten
 D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 8 – Missing
 18 – WeldBroken
 20 – CorrectImproperRepair
 21 – Corrosion
 23 - FlexCracks

5033 FrameExtensionLockingDevice

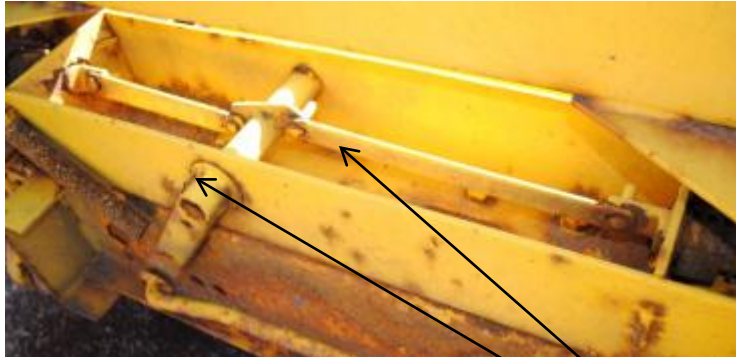

FrameExtensionLockingDevice



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
A - Secure
D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
18 - WeldBroken

5034 ChassisDeckPlate



ChassisDeckPlate

- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

C – Section

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

18 - WeldBroken



5100 ChassisRackMainFrame

- **Location Codes**

 
LS - Left Side
 RS - Right Side
 LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 8 - Straighten,
 C - Section,
 D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 14 - Cut,Torn
 18 – WeldBroken
 23 - FlexCracks

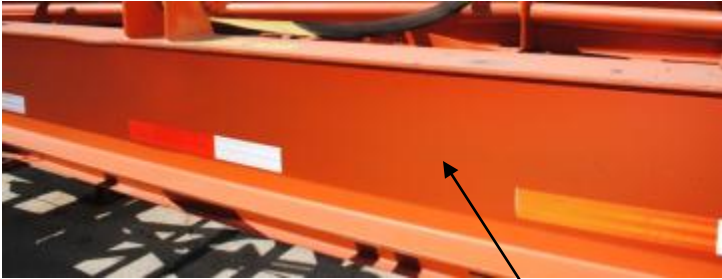

ChassisRackMainFrame



5102 ChassisRackLeg



ChassisRackLeg

- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

C – Section

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

14 - Cut,Torn

18 – WeldBroken

23 - FlexCracks



5103 ChassisRackRestTop



ChassisRackRestTop



- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

C – Section

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

14 - Cut,Torn

18 – WeldBroken

23 - FlexCracks

5104 ChassisRackRestBottom



ChassisRackRest Bottom



- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

C - Section

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

 
3 - Broken

14 - Cut,Torn

18 - WeldBroken

23 - FlexCracks

5105 ChassisRackLegDownBolt

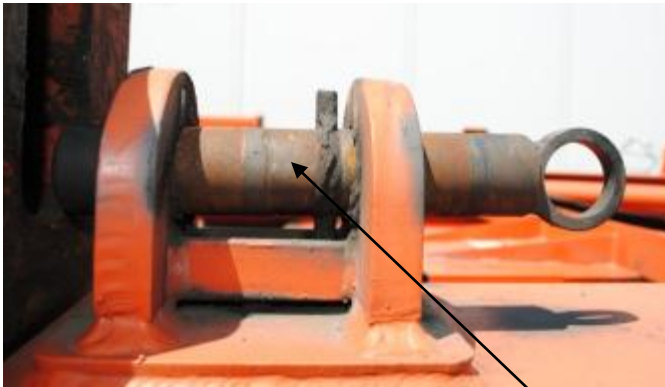

ChassisRackLegDownBolt

- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

 
3 – Broken

7 – Loose

15 - WornOut



5106 ChassisRackStrapTieDown

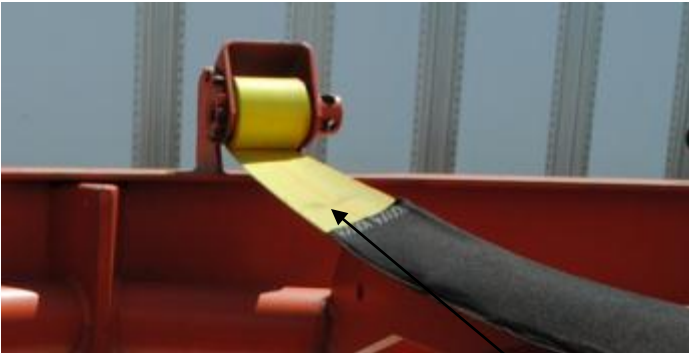

ChassisRackStrapTieDown



- **Location Codes**

LSF - Left Side Front
LSC - Left Side Center
LSR - Left Side Rear

- **Condition Codes**

1 - ReplaceW/New
8 – Straighten
A – Secure
D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
15 – WornOut
18 - WeldBroken

5107 ChassisRackSupportArmLock



ChassisRackSupportArmLock



- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

7 - Loose

8 - Missing

15 - WornOut

18 - WeldBroken

5108 ChassisRackSupportArmHandle



ChassisRackSupportArmHandle

- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 – Missing

18 - WeldBroken



5109 ChassisRackSpringAnchorClip



Location Codes

LF - Left Front
RF - Right Front

Condition Codes

1 - ReplaceW/New
8 - Straighten
A - Secure
D - Weld

ChassisRackSpringAnchorClip

Why Made Codes

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
7 - Loose
8 - Missing
15 - WornOut
18 - WeldBroken



5110 ChassisRestRetentionSpring

- **Location Codes**

LF - Left Front

RF - Right Front

- **Condition Codes**

1 - ReplaceW/New

A – Secure

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

 
7 – Loose

8 – Missing

15 – WornOut

18 - WeldBroken

ChassisRestRetentionSpring

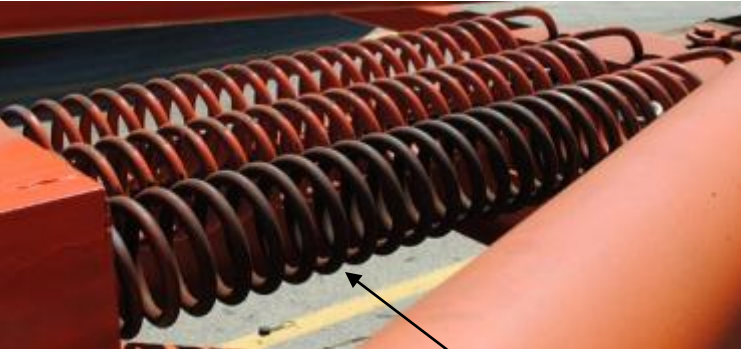

5111 ChassisRackWeldonWinch



ChassisRackWeldonWinch



- **Location Code**

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A – Secure

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

15 – WornOut

18 - WeldBroken

5112 ChassisRackWinchMountPlate



ChassisRackWinchMountPlate



- **Location Code**

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

A – Secure

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

15 – WornOut

18 - WeldBroken

5113 ChassisRackWinch



ChassisRackWinch

- **Location Codes**

LSF - Left Side Front
 LSC - Left Side Center
 LSR - Left Side Rear
 RSF - Right Side Front
 RSC - Right Side Center
 RSR - Right Side Rear

- **Condition Codes**

1 - ReplaceW/New
 A - Secure
 D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs
 2 - Bent
 3 - Broken
 7 - Loose
 8 - Missing
 15 - WornOut
 18 - WeldBroken

5114 ChassisRackWinchBar



ChassisRackWinchBar

- **Location Code**

LSF - Left Side Front

- **Condition Codes**

1 – ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 – Missing

15 - WornOut

5301 LowerCornerCasting

- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

18 - WeldBroken

20 - CorrectImproperRepair

23 - FlexCracks



LowerCornerCasting



5302 UpperCornerCasting



UpperCornerCasting



- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

18 - WeldBroken

20 - CorrectImproperRepair

23 - FlexCracks

5310 Stacking Post



Stacking Post



- **Location Codes**

LF - Left Front
 LR - Left Rear
 RF - Right Front
 RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
 D - Weld,
 H - Overlay

- **Why Made Codes**

2 - Bent
 3 - Broken
 14 - Cut, Torn
 18 - WeldBroken
 20 - CorrectImproperRepair
 23 - FlexCracks

5311 IntermediateStackingPostCastingUpper



IntermediateStackingPost
CastingUpper



- **Location Codes**

LF - Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Code**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
18 - WeldBroken
20 - CorrectImproperRepair
23 - FlexCracks

5312 IntermediateStackingPostCastingLower



IntermediateStackingPost
CastingLower



- **Location Codes**

LF - Left Front
LR - Left Rear
RF - Right Front
RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New
8 - Straighten
D - Weld

- **Why Made Code**

1 - AssociatedWithRepairs
2 - Bent
3 - Broken
18 - WeldBroken
20 - CorrectImproperRepair
23 - FlexCracks

5320 IntermediateHeader



IntermediateHeader



- **Location Codes**

TF - Top Front

TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

H - Overlay

- **Why Made Codes**

2 - Bent

3 - Broken

 
14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

23 - FlexCracks

5321 IntermediateHeaderGusset

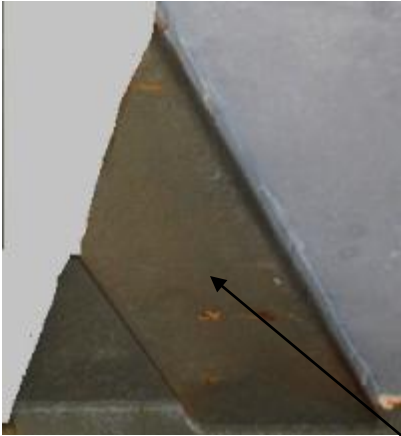

IntermediateHeaderGusset



- **Location Codes**

TF - Top Front

TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

D - Weld

H - Overlay

- **Why Made Codes**

1 - AssociatedWithRepairs

2 - Bent

3 - Broken

14 - Cut, Torn

18 - WeldBroken

20 - CorrectImproperRepair

23 - FlexCracks

5330 Tunnel

- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

C - Section

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

14 - Cut,Torn

18 - WeldBroken

20 - CorrectImproperRepair

23 - FlexCracks

Tunnel



5331 TunnelRail

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

C – Section

D – Weld

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

14 - Cut,Torn

18 – WeldBroken

20 – CorrectImproperRepair

23 - FlexCracks



TunnelRail



5332 TunnelPlate



TunnelPlate



- **Location Code**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

C - Section

D - Weld

- **Why Made Codes**

2 - Bent

3 - Broken

18 - WeldBroken

20 - CorrectImproperRepair

21 - Corrosion

23 - FlexCracks

5333 TunnelBolster(Rail)

- **Location Codes**

U - Under

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

C – Section

D – Weld

- **Why Made Codes**

2 – Bent

 
3 – Broken

18 – WeldBroken

20 – CorrectImproperRepair

23 - FlexCracks

TunnelBolster(Rail)



5340 ChannelOutrigger(Crossmember)

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

D – Weld

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

 
8 – Missing

14 - Cut,Torn

20 – CorrectImproperRepair

23 - FlexCracks

ChannelOutrigger(Crossmember)

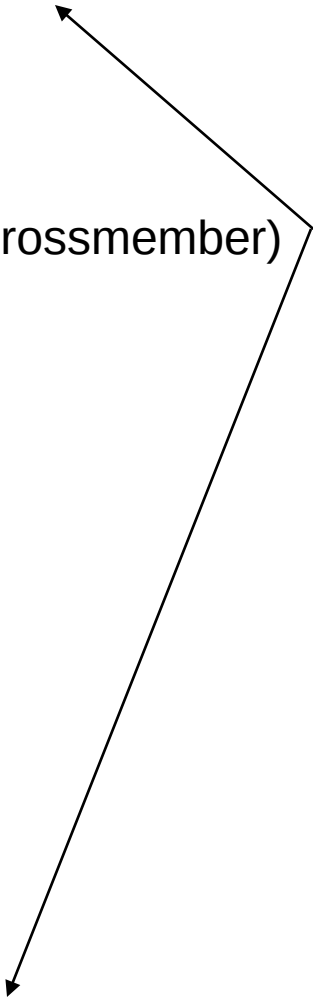

5350 RoofBumpPlate

- **Location Codes**

TF - Top Front

TR - Top Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

 
2 – Bent

3 – Broken

8 – Missing

18 - WeldBroken

RoofBumpPlate

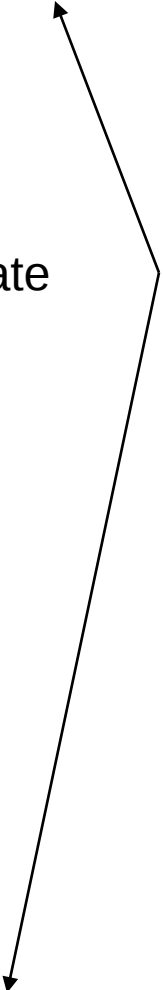

5351 KneeBrace(Gusset)

- **Location Codes**

LF - Left Front

LR - Left Rear

RF - Right Front

RR - Right Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

D – Weld

- **Why Made Codes**

1 – AssociatedWithRepairs

 
2 – Bent

3 – Broken

18 – WeldBroken

20 - CorrectImproperRepair

KneeBrace(Gusset)

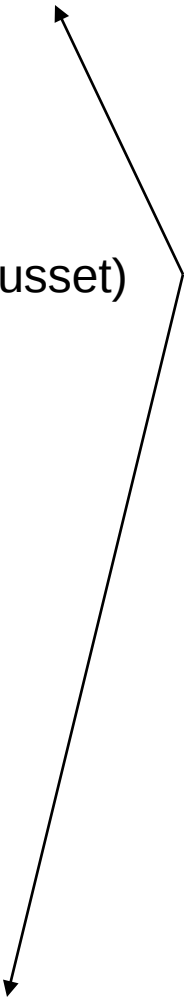

5352 TubularCrossmember(Container)

- **Location Code**

U - Under

- **Condition Codes**

 
1 - ReplaceW/New

8 - Straighten

C - Section

D - Weld

TubularCrossmember(Container)

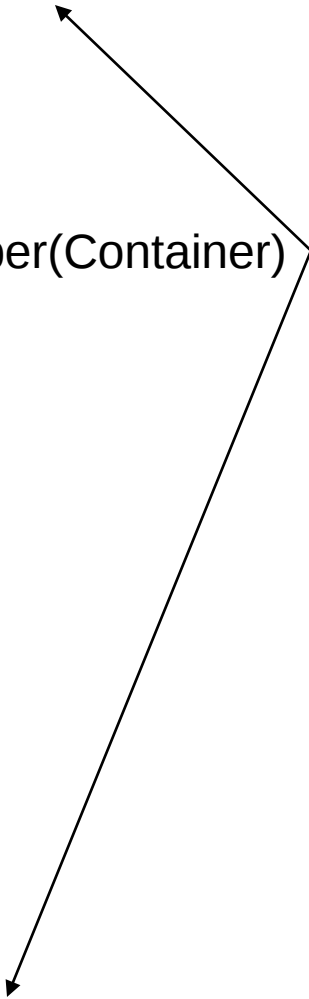

- **Why Made Codes**

2 - Bent

3 - Broken

18 - WeldBroken

20 - CorrectImproperRepair

5522 BinderChain

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

A – Secure

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

8 - Missing



BinderChain



5524 HammerLock

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

2 – Bent

3 – Broken

8 - Missing



HammerLock



5525 Binders

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Codes**

1 - ReplaceW/New

A – Secure

- **Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

8 - Missing



Binders



5527 GrabHook



GrabHook

- **Location Codes**

LS - Left Side

RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

2 – Bent

3 – Broken

8 - Missing



5614 LoadRetainerBar



LoadRetainerBar

- **Location Code**

I - Interior

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

8 - Missing



5618 LoadGate



LoadGate



- **Location Code**

R - Rear

- **Condition Codes**

1 - ReplaceW/New

8 - Straighten

A - Secure

- **Why Made Codes**

2 - Bent

3 - Broken

7 - Loose

5620 CargoStrap



CargoStrap

- **Location Codes**

LS - Left Side
RS - Right Side

- **Condition Codes**

1 - ReplaceW/New
A - Secure

- **Why Made Codes**

3 - Broken
7 - Loose
8 - Missing
14 - Cut, Torn



5651 FMCSA-PI

FMCSA - PERIODIC INSPECTION
CERTIFICATION

This vehicle has passed an inspection in accordance with 49 C.F.R. Part 396 and must be reinspected during or before the same calendar month one year after the date shown below. Information on the contents of the inspection report can be obtained by contacting the owner/lessee; _____

PHONE _____ DATE OF INSPECTION _____

JAN	FEB	MAR	APR	MAY	JUN	11	12
JUL	AUG	SEP	OCT	NOV	DEC		

PUNCH APPROPRIATE MONTH AND YEAR

- **Location Code**

C - Complete

- **Condition Codes**

1 - ReplaceW/New

6 - MaterialOnly

7 - LaborOnly

- **Why Made Code**

25 - State/Federal/Insp.

FMCSA-PI



5654 StateVehicleInspection(BIT)

- Location Code**

C - Complete

- Condition Codes**

1 - ReplaceW/New

7 - LaborOnly

- Why Made Code**

25 - State/Federal/Insp.



StateVehicleInspection
(BIT)



5677 Insulation

- **Location Codes**

F – Front

T – Top

LSF - Left Side Front

 
LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

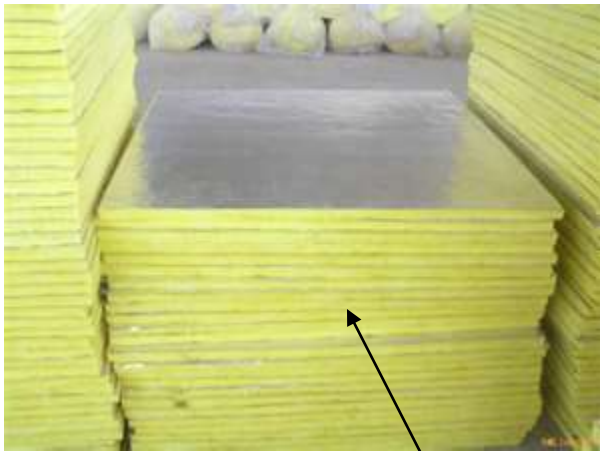

Insulation

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

8 – Missing

14 - Cut,Torn



5689 ReportingMark/Number

- **Location Codes**

F – Front
R – Rear
LS - Left Side
RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
8 - Missing



ReportingMark/Number



5690 Logo



CANADIAN PACIFIC



Logo

- **Location Codes**

F – Front

R – Rear

LS - Left Side

RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Code**

8 - Missing



5692 InformationDecalStencil



InformationDecalStencil



- **Location Codes**

F – Front
R – Rear
LS - Left Side
RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
8 – Missing
14 - Cut,Torn
15 – WornOut
32 - PerContract

5693 WideTurnDecal



WideTurnDecal



- **Location Code**

RR - Right Rear

- **Condition Code**

7 – LaborOnly

- **Why Made Codes**

1 – AssociatedWithRepairs

32 – PerContract

6025 Evaporator

- **Location Code**

F - Front

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 – Missing

 
14 - Cut,Torn

19 - InternalFailure

Evaporator



6050 Reefer, Door

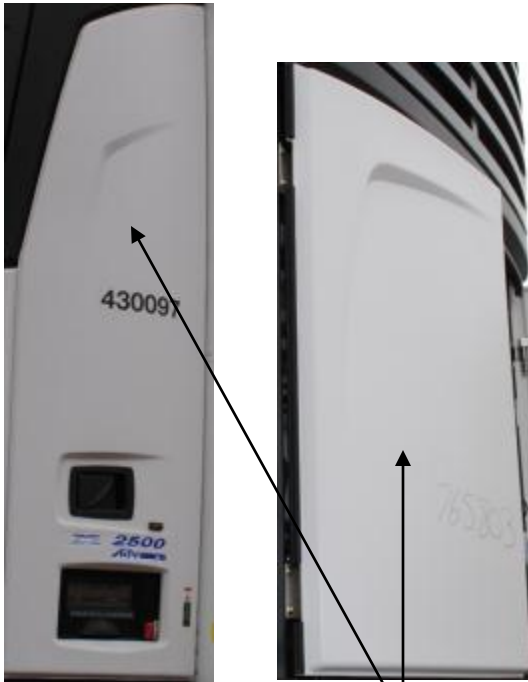

Reefer, Door



- **Location Codes**

F – Front
I – Interior
U – Under

- **Condition Codes**

1 - ReplaceW/New
A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut, Torn

6051 Reefer, MicroProcessorDoor



Reefer, MicroProcessorDoor



- **Location Codes**

F – Front
I – Interior
U – Under

- **Condition Codes**

1 - ReplaceW/New
A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut, Torn

6150 UnitSkins(panels)

UnitSkins(panels)

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Codes**

1 - ReplaceW/New
A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut,Torn

6151 CondensorGrill

- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Codes**

1 - ReplaceW/New

A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 - Missing



CondensorGrill



6152 CondensingUnit

- **Location Codes**

 
F – Front
I – Interior
U - Under

- **Condition Codes**

1 - ReplaceW/New
A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
8 - Missing

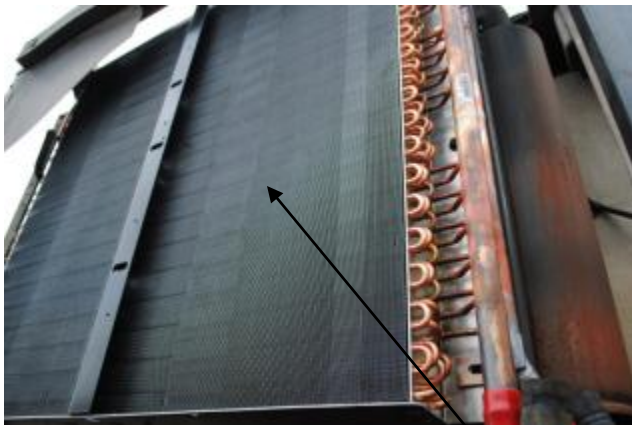

CondensingUnit



6155 Microprocessor



Microprocessor

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Codes**

1 - ReplaceW/New
A – Secure

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
14 - Cut,Torn



6156 Refrigeration/HeaterUnitFrame



- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Codes**

1 - ReplaceW/New
8 – Straighten
A – Secure

Refrigeration/HeaterUnitFrame



- **Why Made Codes**

2 – Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut,Torn

6200 FuelTank

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Codes**

1 - ReplaceW/New
A – Secure

- **Why Made Codes**

 
1 – AssociatedWithRepairs
2 – Bent
3 – Broken
7 – Loose
14 - Cut,Torn



FuelTank



6201 FuelTankNeck

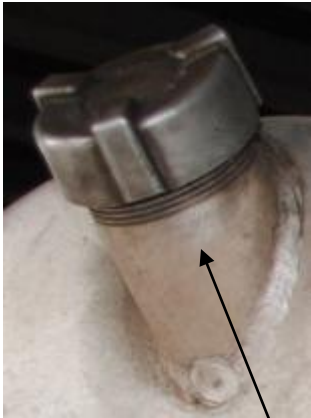

FuelTankNeck

- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 – Missing

14 - Cut,Torn



6204 Compressor



Compressor



- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
5 – Inoperative
8 – Missing
19 - InternalFailure

6205 Engine

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Code**

 
1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
3 – Broken
5 – Inoperative
8 – Missing
19 - InternalFailure



Engine

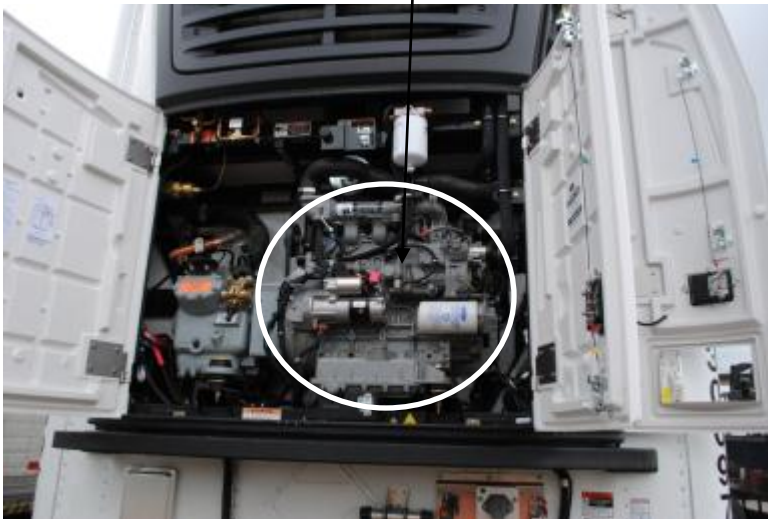

6209 Battery



Battery



- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

3 – Broken

5 – Inoperative

8 - Missing

6220 Heater



Heater

- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

 
1 – AssociatedWithRepairs

2 – Bent

3 – Broken

5 – Inoperative

8 - Missing

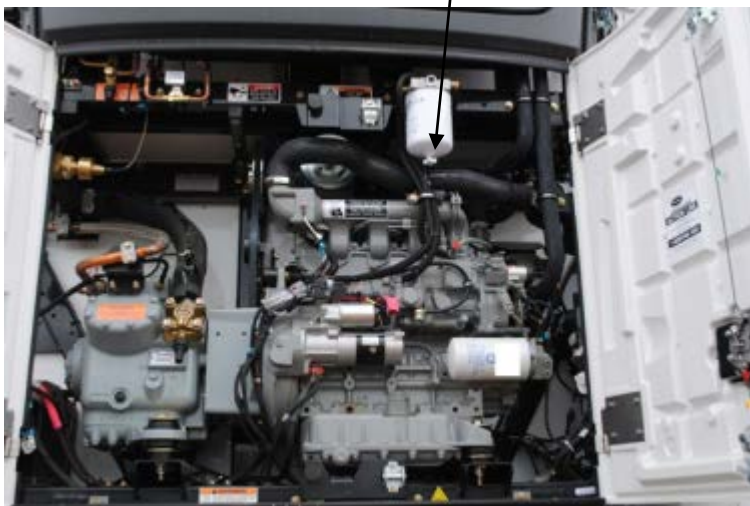

6221 HeatExchange

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
5 – Inoperative
8 - Missing



HeatExchange



6224 PowerTrain

- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

5 – Inoperative

8 - Missing

PowerTrain



6225 Alternator



Alternator

- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

5 – Inoperative

8 - Missing



6226 ControlBox-Electrical



ControlBox-Electrical



- **Location Codes**

F – Front
I – Interior
U - Under

 
- **Condition Code**

1 - ReplaceW/New


- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
5 – Inoperative
8 - Missing

6227 FuelSystem

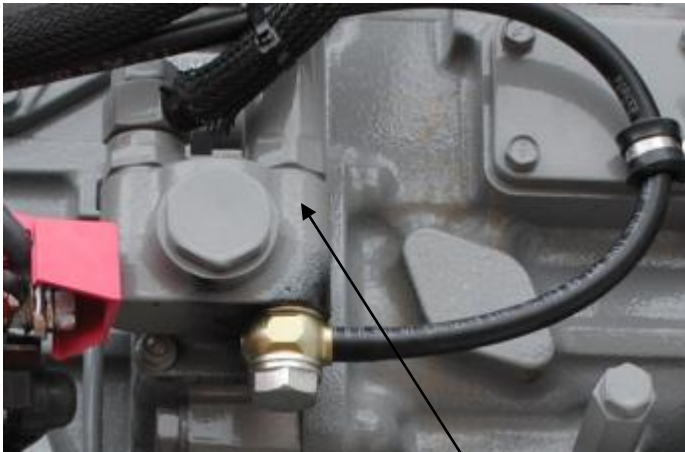

FuelSystem

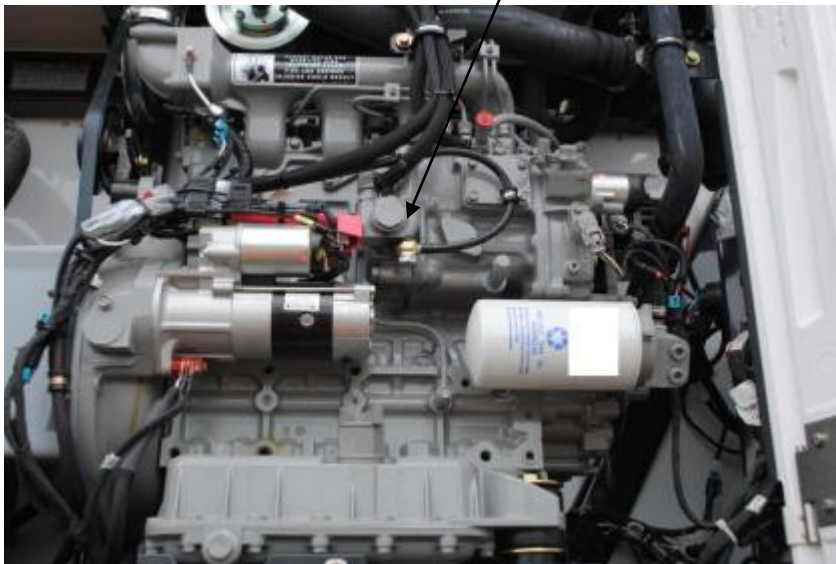 

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 - Missing

6228 EngineCoolingSystem

- **Location Codes**

F – Front
I – Interior
U - Under

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
5 – Inoperative
8 - Missing



EngineCoolingSystem



6229 Exhaust



Exhaust

- **Location Codes**

F – Front

I – Interior

U - Under

- **Condition Code**

1 - ReplaceW/New

 
- **Why Made Codes**

1 – AssociatedWithRepairs


2 – Bent

3 – Broken

8 - Missing

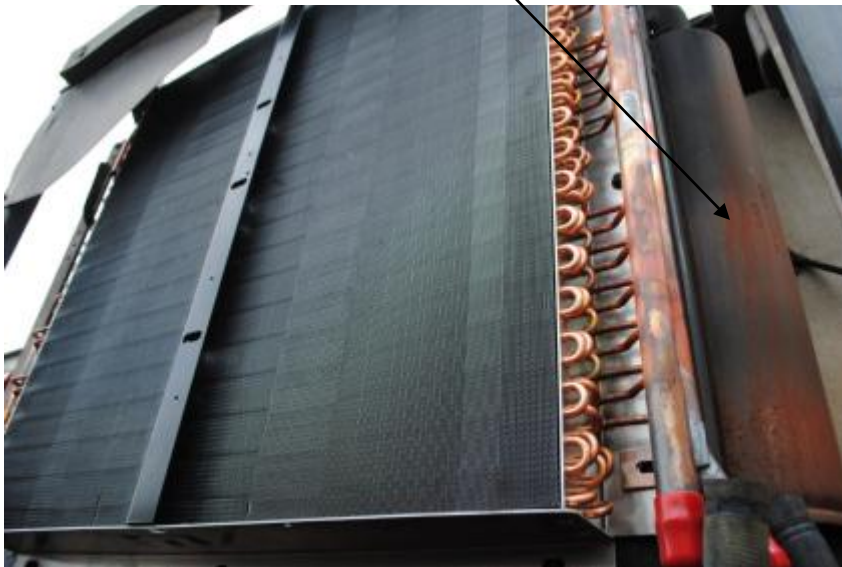

6231 IntegralTank

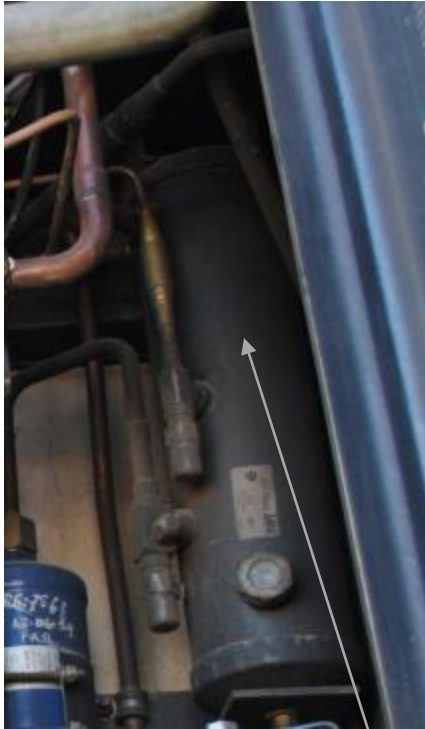 

IntegralTank



- **Location Codes**

F – Front
I – Interior
U - Under

 
- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
3 – Broken
8 - Missing

6552 Jacket

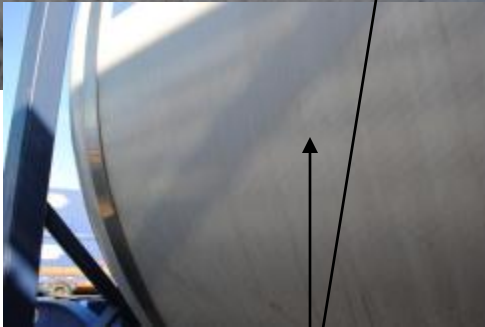

Jacket



- Location Codes**

F – Front

R – Rear

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- Condition Codes**

1 - ReplaceW/New

8 – Straighten

C – Section

D – Weld

- Why Made Codes**

 
2 – Bent

3 – Broken

14 - Cut,Torn

18 - WeldBroken

6600 EmergencyCable

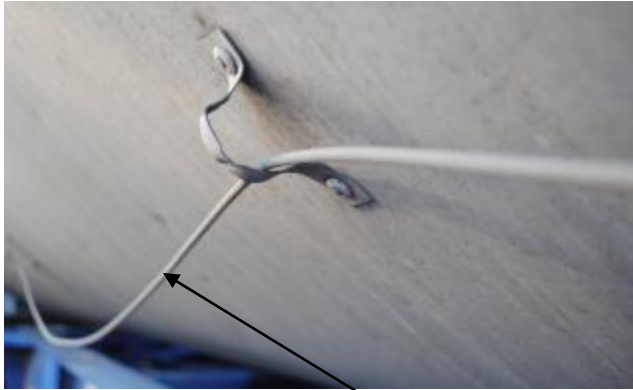

EmergencyCable



- **Location Code**

R - Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

8 - Missing

6601 Banding



Banding



- **Location Codes**

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 - Missing

6603 DocumentTube

- **Location Codes**

LSC - Left Side Center

RSC - Right Side Center

- **Condition Code**

 
1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

8 - Missing

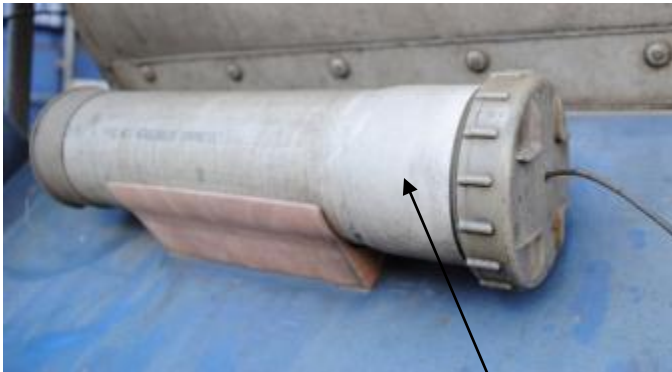

DocumentTube



6604 DrainTube



DrainTube

- **Location Codes**

 
LS - Left Side
RS - Right Side

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs
2 – Bent
14 - Cut,Torn

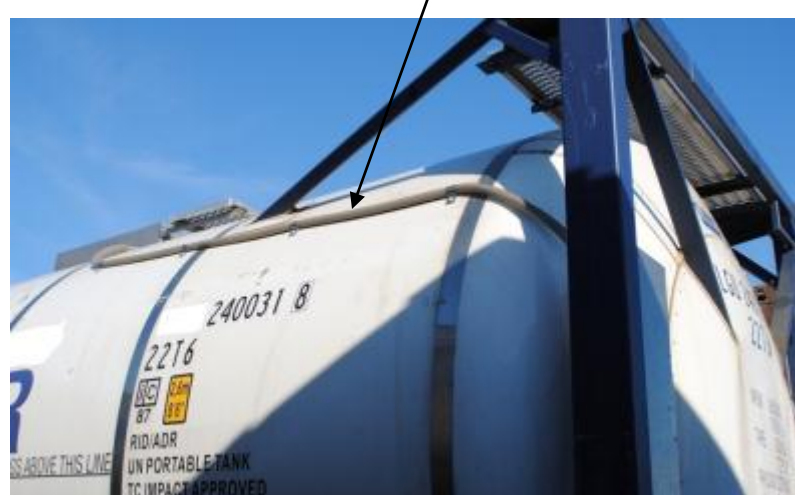

6651 DischargeValveHandles

- **Location Code**

R - Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 - Missing

DischargeValveHandles



6652 Seal

- **Location Code**

 
R - Rear

- **Condition Code**


1 - ReplaceW/New

- **Why Made Code**


3 - Broken

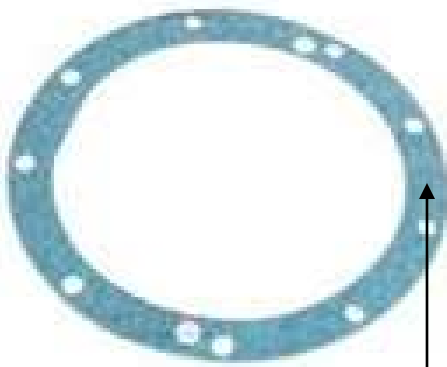

Seal

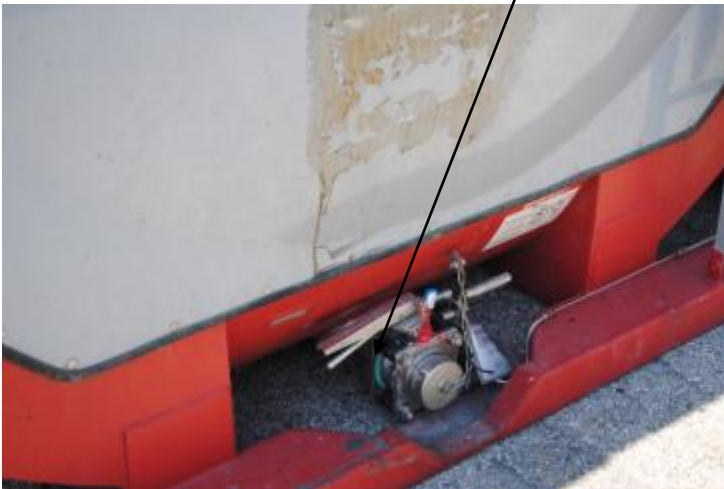 

6653 DischargeValveDustCap

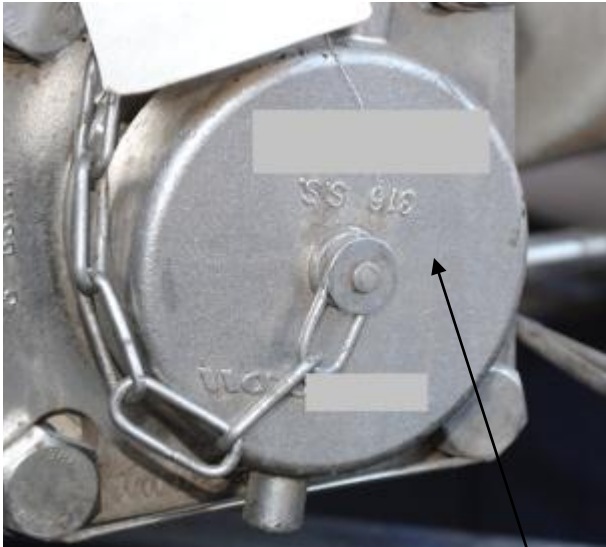 

DischargeValveDustCap



- **Location Code**

R - Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 - Missing

6654 Ladder



- **Location Codes**

F – Front

R - Rear

- **Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

D – Weld

Ladder

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

7 – Loose

8 – Missing

14 – Cut/Torn

18 - WeldBroken



6700 Swingbolts

- **Location Code**

T - Top

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

 
3 – Broken

8 - Missing

Swingbolts



6701 DomeLid

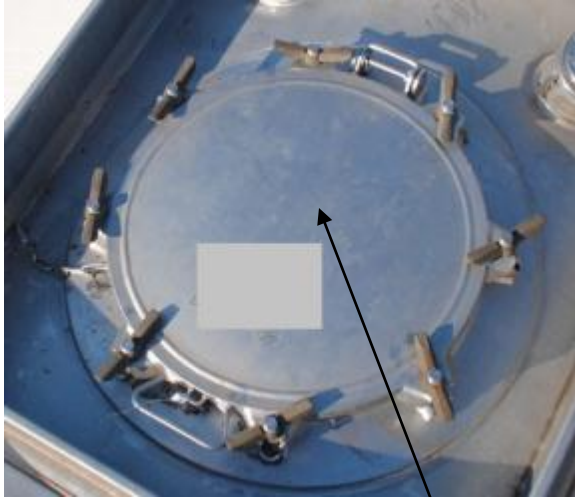

DomeLid



- **Location Code**

T - Top

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 - Missing

6702 Catwalk

- Location Codes**

R – Rear
 TF - Top Front
 TC - Top Center
 TR - Top Rear

- Condition Codes**

1 - ReplaceW/New
 8 – Straighten
 A – Secure
 C – Section
 D – Weld

- Why Made Codes**

1 – AssociatedWithRepairs
 2 – Bent
 3 – Broken
 7 – Loose
 8 – Missing
 14 - Cut,Torn
 18 - WeldBroken



Catwalk



6703 InletValveandCap



- **Location Code**

T - Top

- **Condition Code**

1 - ReplaceW/New

 
- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 - Missing

InletValveandCap

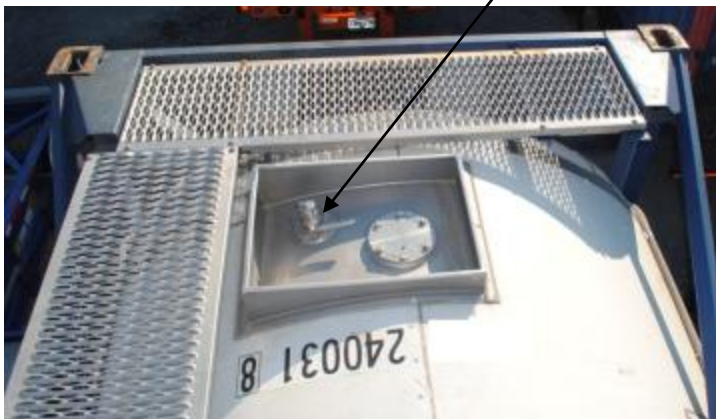

6704 PressureReliefValves



PressureReliefValves

- **Location Code**

T - Top

- **Condition Code**

 
1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

3 – Broken

8 - Missing

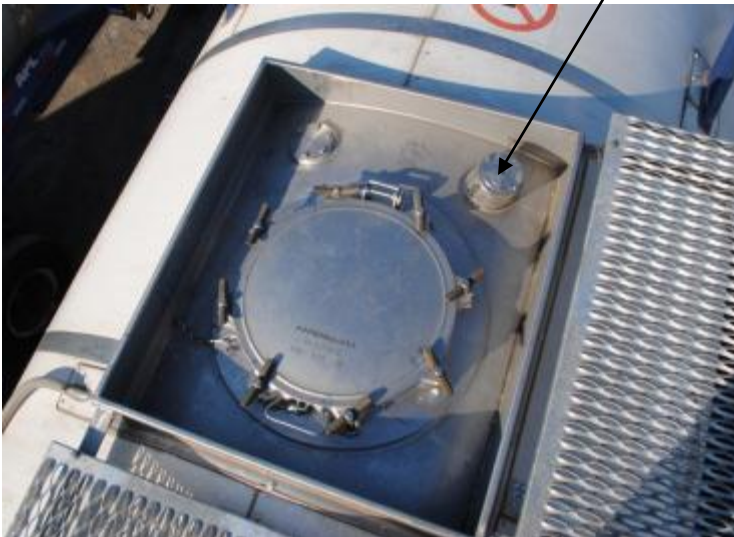

6705 Frame,Bulktainer



- Location Codes**

F – Front

R – Rear

LSF - Left Side Front

LSC - Left Side Center

LSR - Left Side Rear

RSF - Right Side Front

RSC - Right Side Center

RSR - Right Side Rear

- Condition Codes**

1 - ReplaceW/New

8 – Straighten

A – Secure

C – Section

D - Weld

- Why Made Codes**

2 – Bent

3 – Broken

7 – Loose

14 - Cut,Torn

18 - WeldBroken

Frame,Bulktainer



6751 Tubes/HoseHolders

- **Location Code**

R - Rear

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 - Bent

3 – Broken

8 - Missing



Tubes/HoseHolders



6755 Fenders

- Location Codes**

F – Front
R – Rear
LR - Left Rear
RR - Right Rear

- Condition Codes**

1 - ReplaceW/New
8 – Straighten
A – Secure
C – Section
D – Weld

- Why Made Codes**

 
1 – AssociatedWithRepairs
2 - Bent
3 – Broken
7 – Loose
8 – Missing
14 - Cut,Torn
18 - WeldBroken



Fenders



6757 RegistrationforChassis

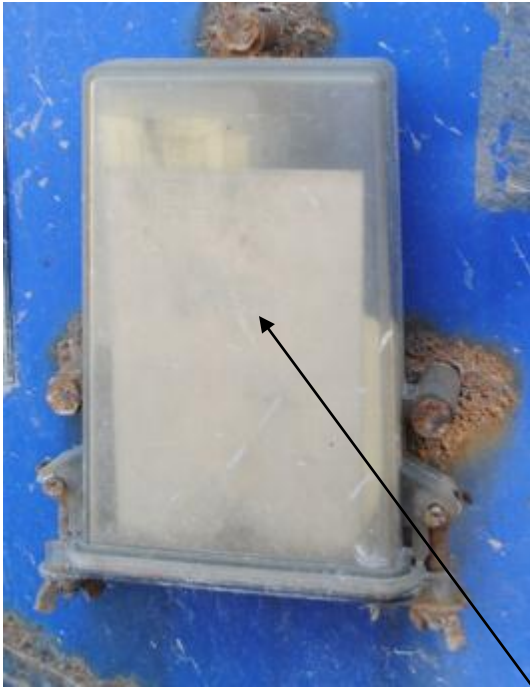

- **Location Code**

C - Complete

- **Condition Code**

1 - ReplaceW/New

- **Why Made Code**

8 - Missing



RegistrationforChassis

6771 SplashGuards

- **Location Codes**

LR - Left Rear

RR - Right Rear



SplashGuards

- **Condition Code**

1 - ReplaceW/New

- **Why Made Codes**

1 – AssociatedWithRepairs

2 – Bent

3 – Broken

8 - Missing



Compiled and Constructed by:
The Chicago Car Interchange Bureau



Thank you to the following for their invaluable assistance:

Kelly Harrington

ATSF—Retired



Intermodal
Maintenance
Group L.L.C.

